
 


FIG. 1

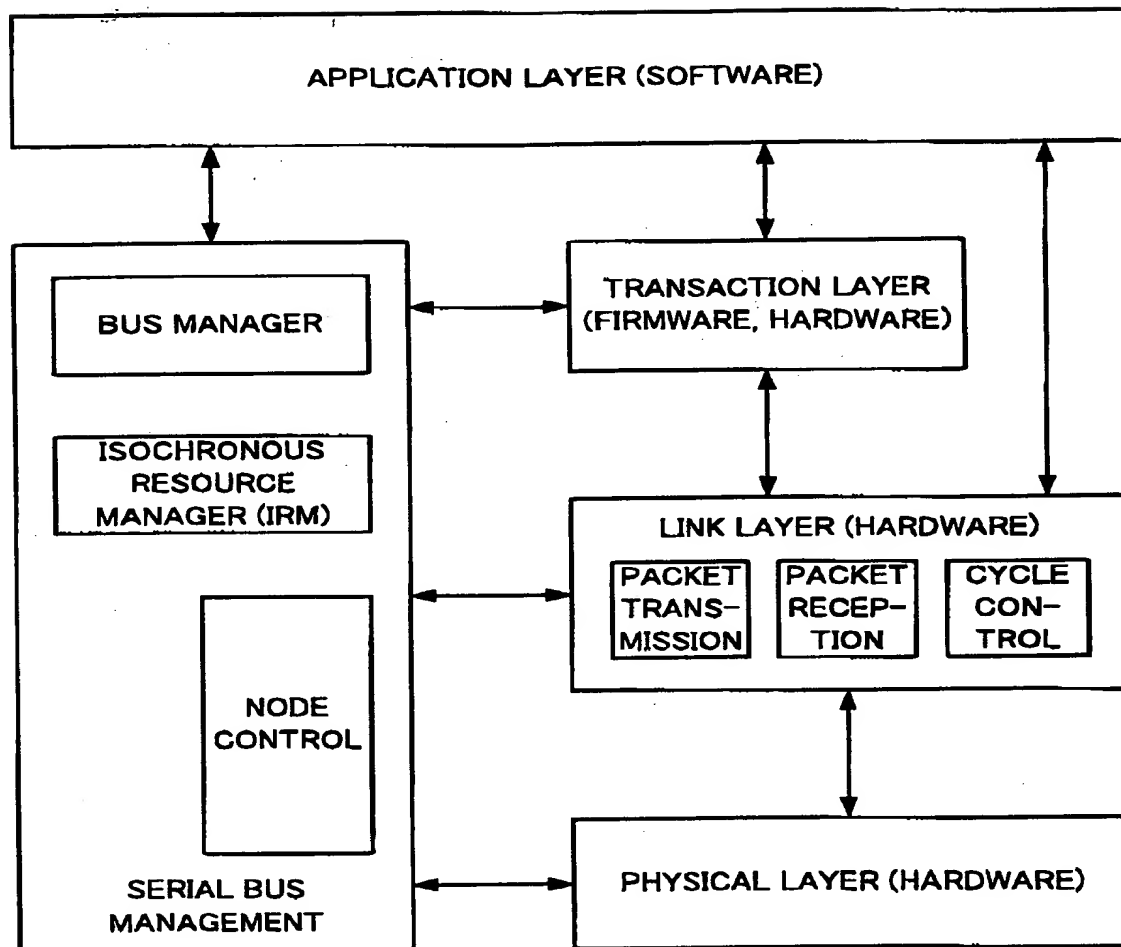 


002707" 54088960

FIG. 2

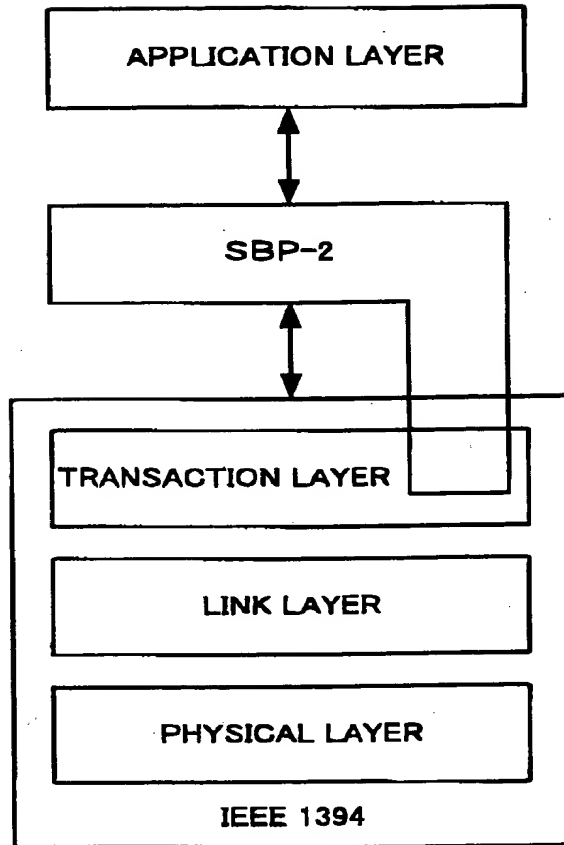

002101 54038950

 FIG. 3

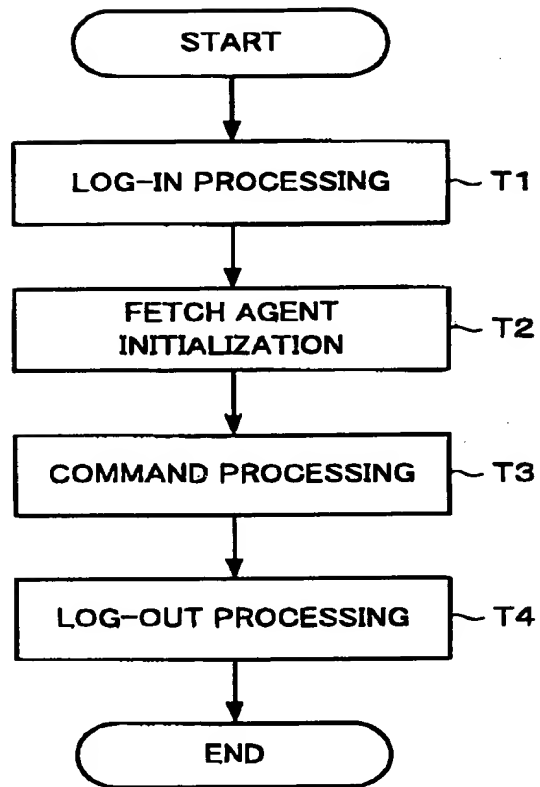

0968045-101200

FIG. 4


 
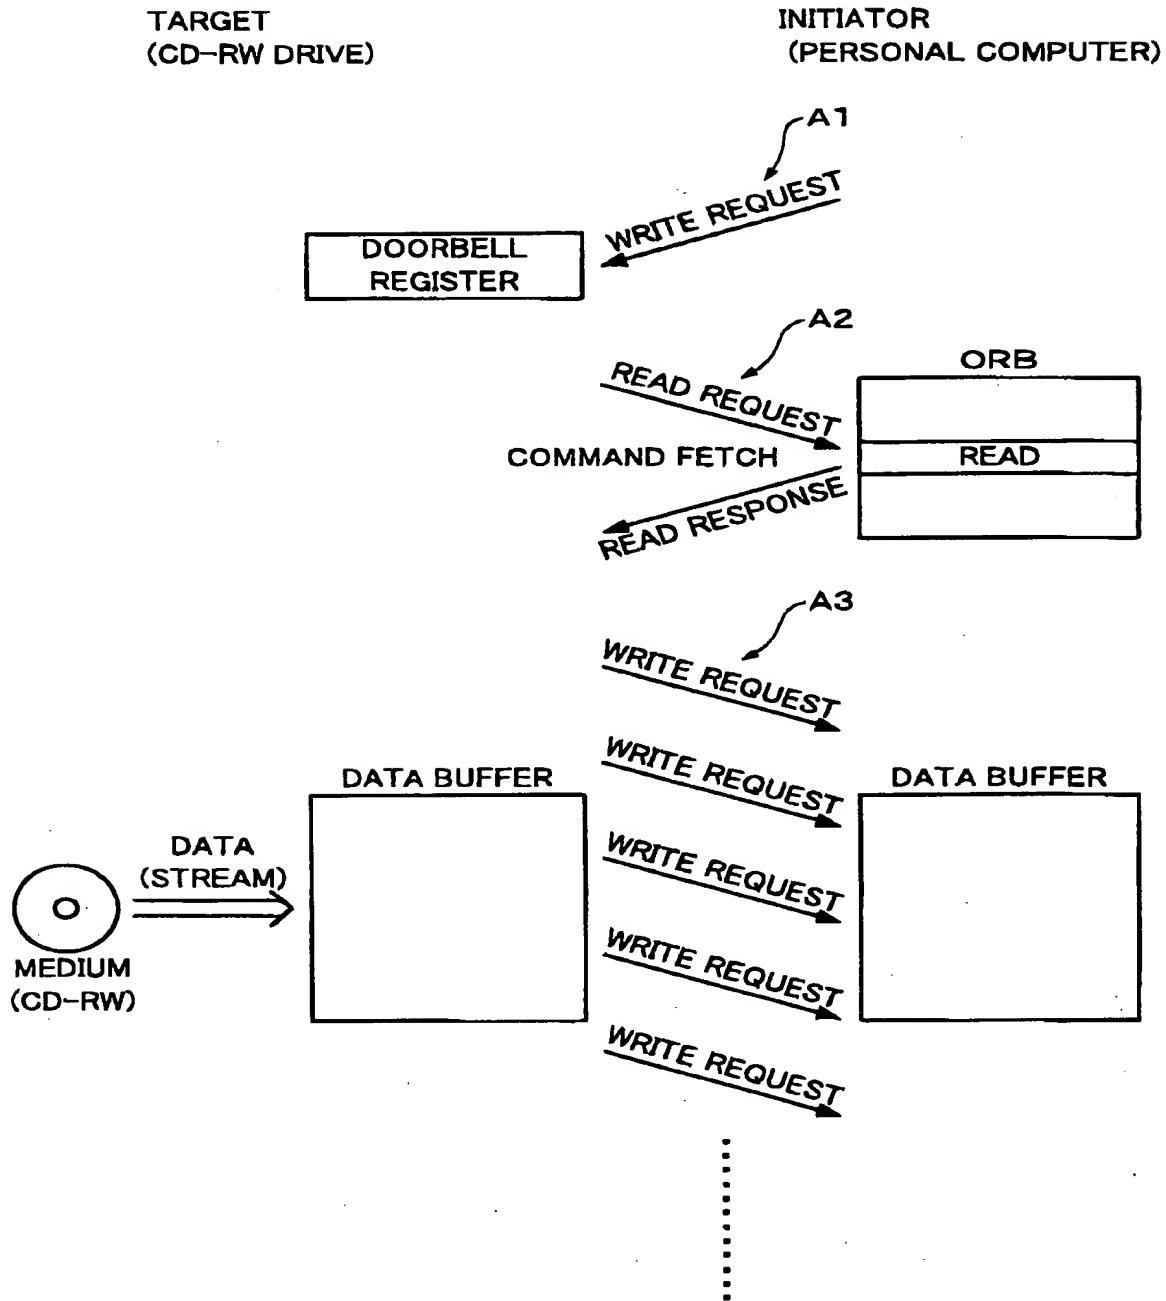 


FIG. 5


TARGET
(CD-RW DRIVE)INITIATOR
(PERSONAL COMPUTER)

002101 54088950

 FIG. 6A
TARGET (SELF NODE)

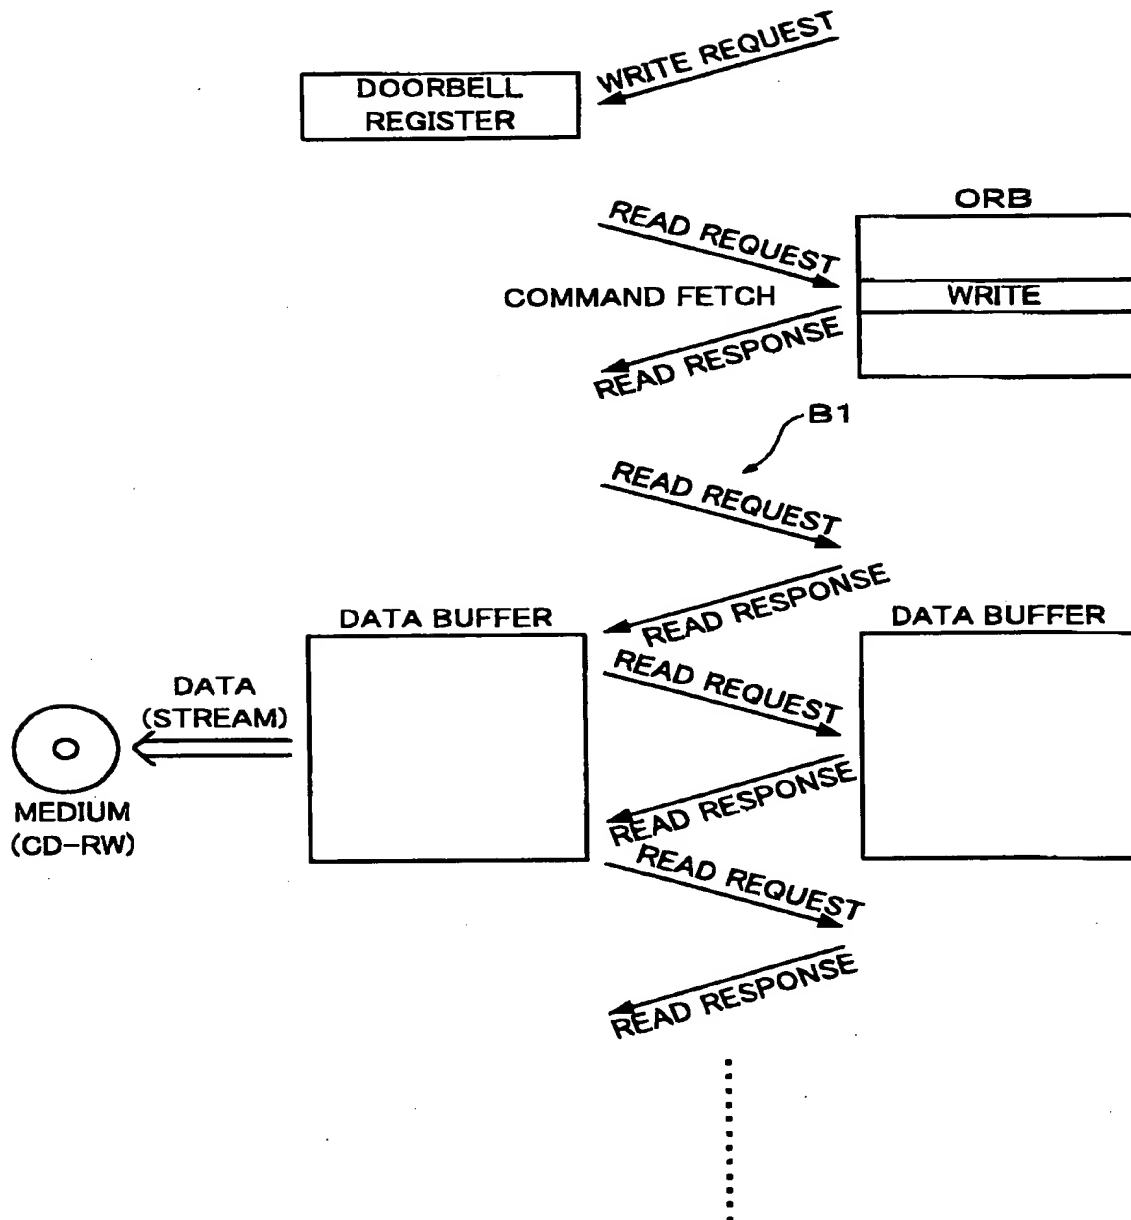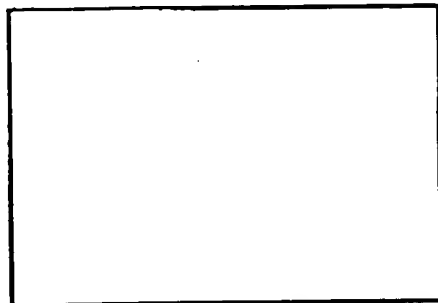

INITIATOR (ANOTHER NODE)

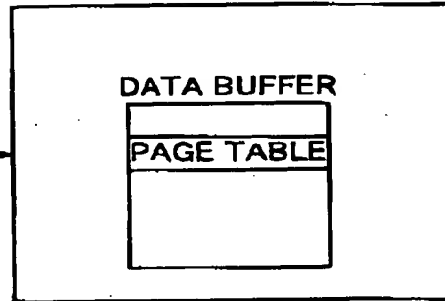 

IEEE 1394

FIG. 6B
WHEN A PAGE TABLE EXISTS


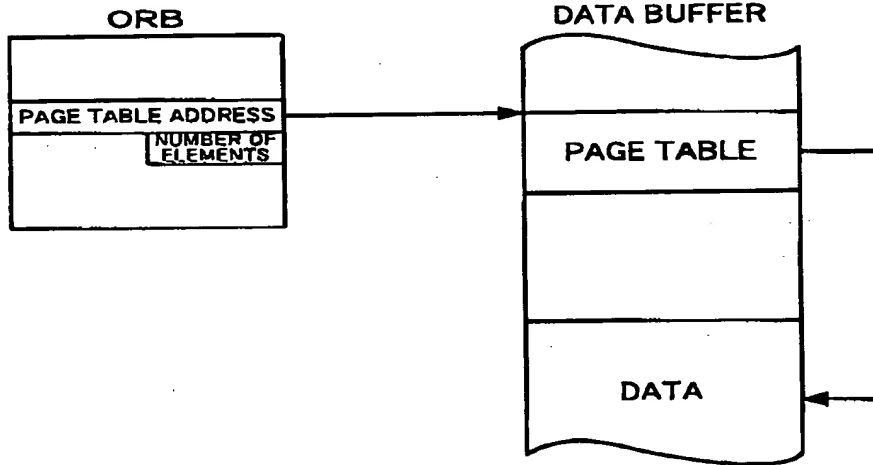 


FIG. 6C
WHEN NO PAGE TABLE EXISTS

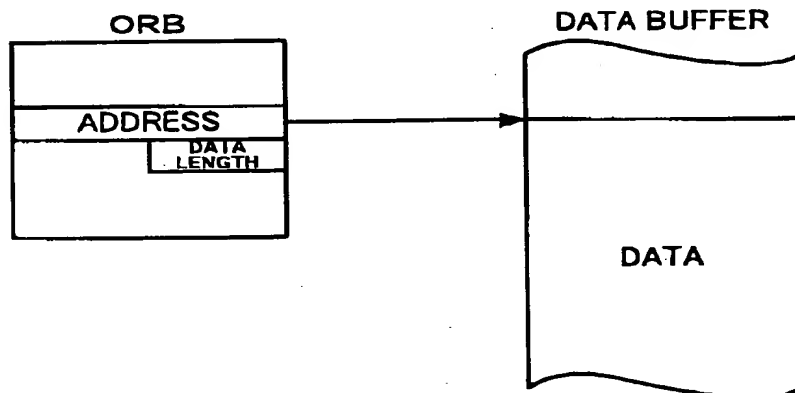 

F. I. G. 7



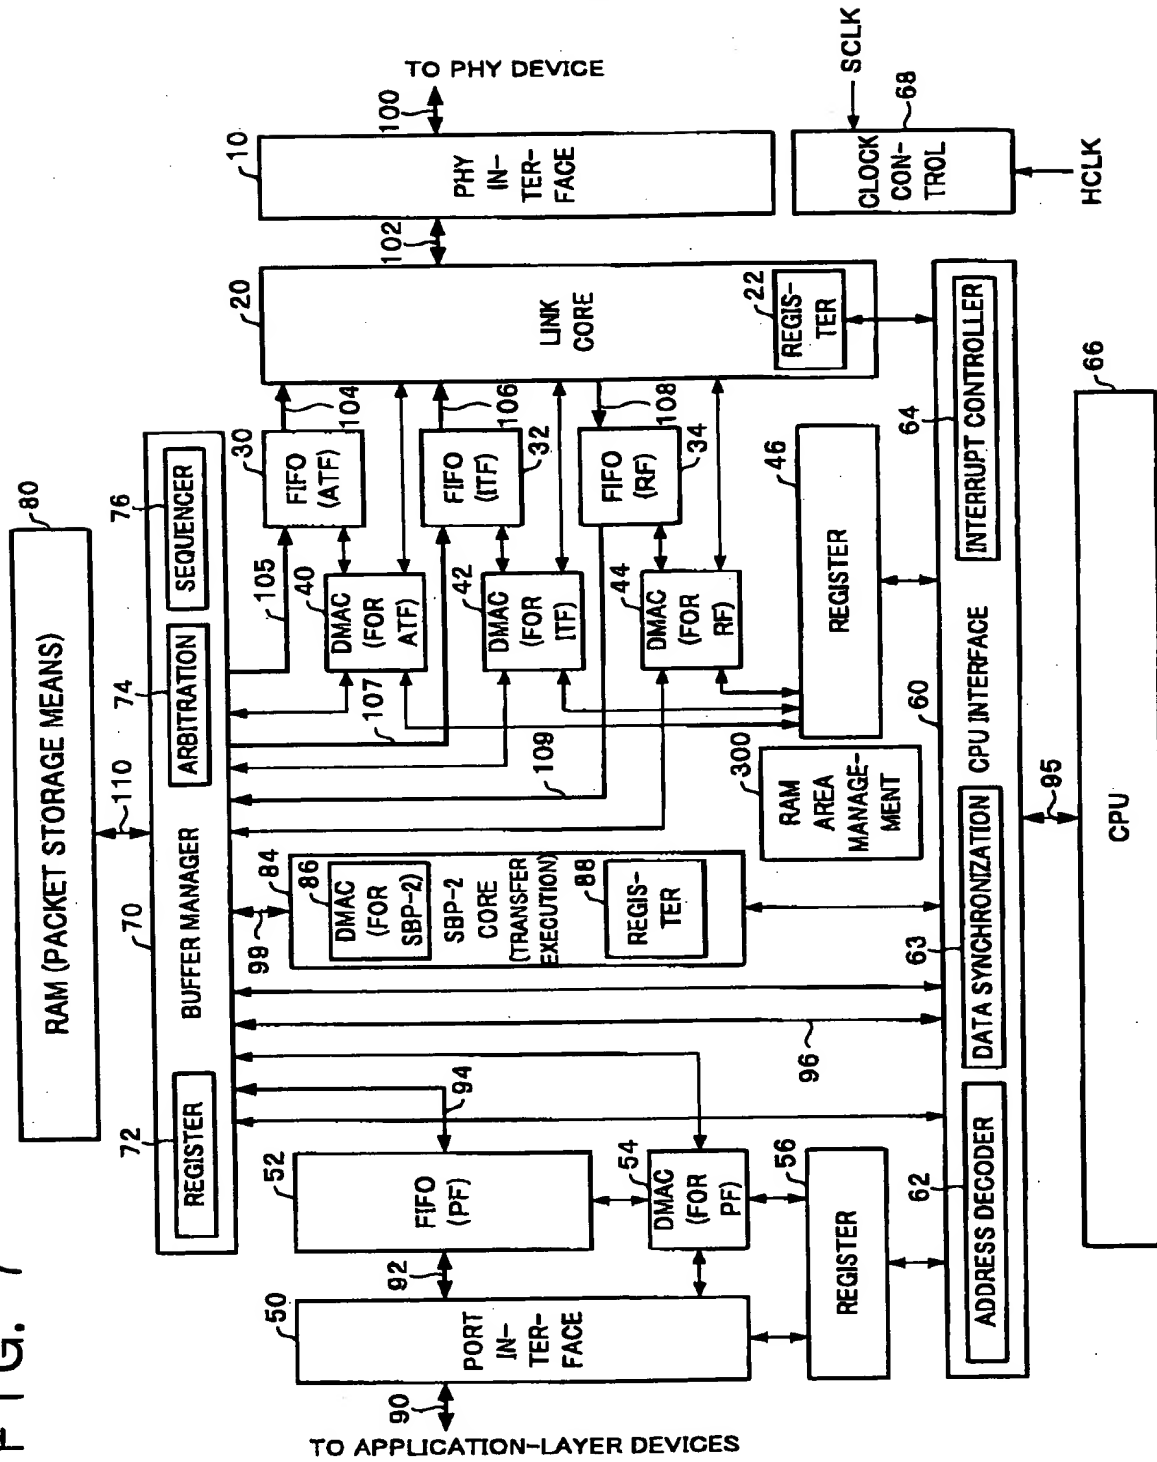 


FIG. 8

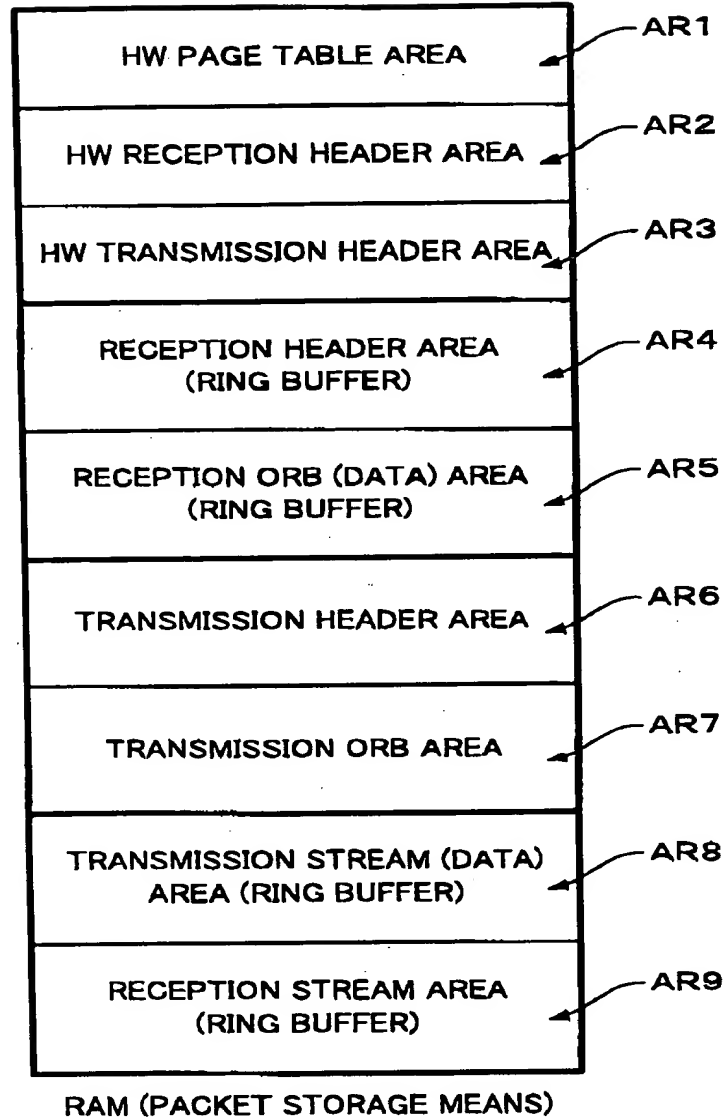 

09688045-101200

 FIG. 9

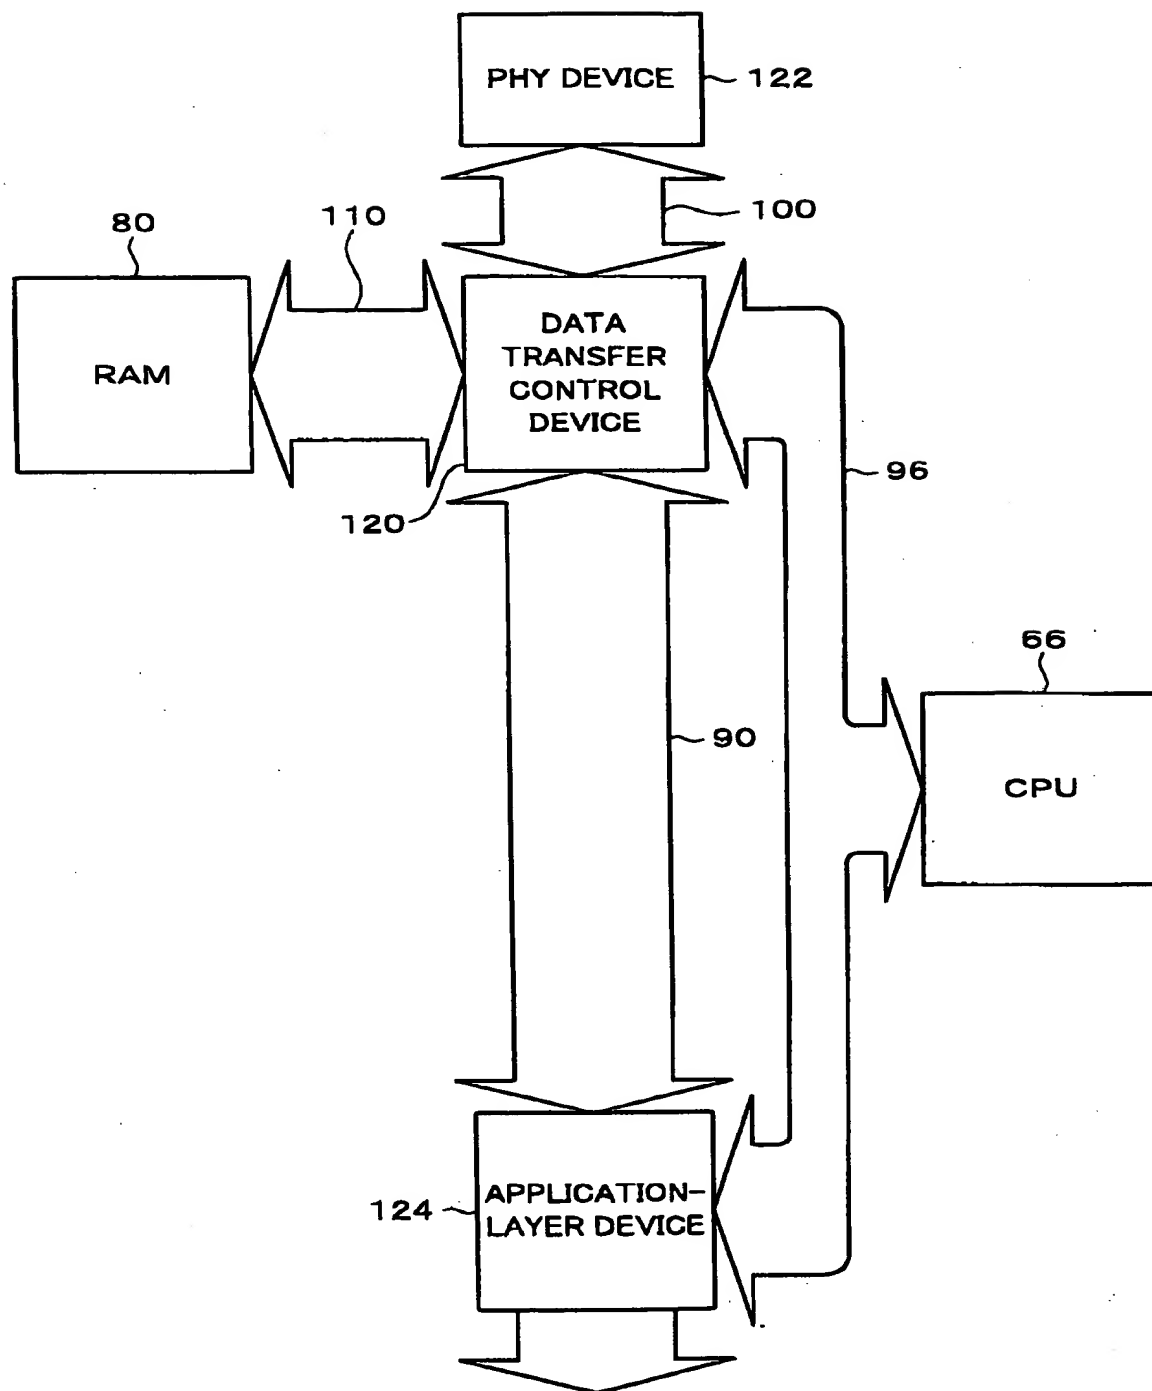

09688045 "101200

FIG. 10



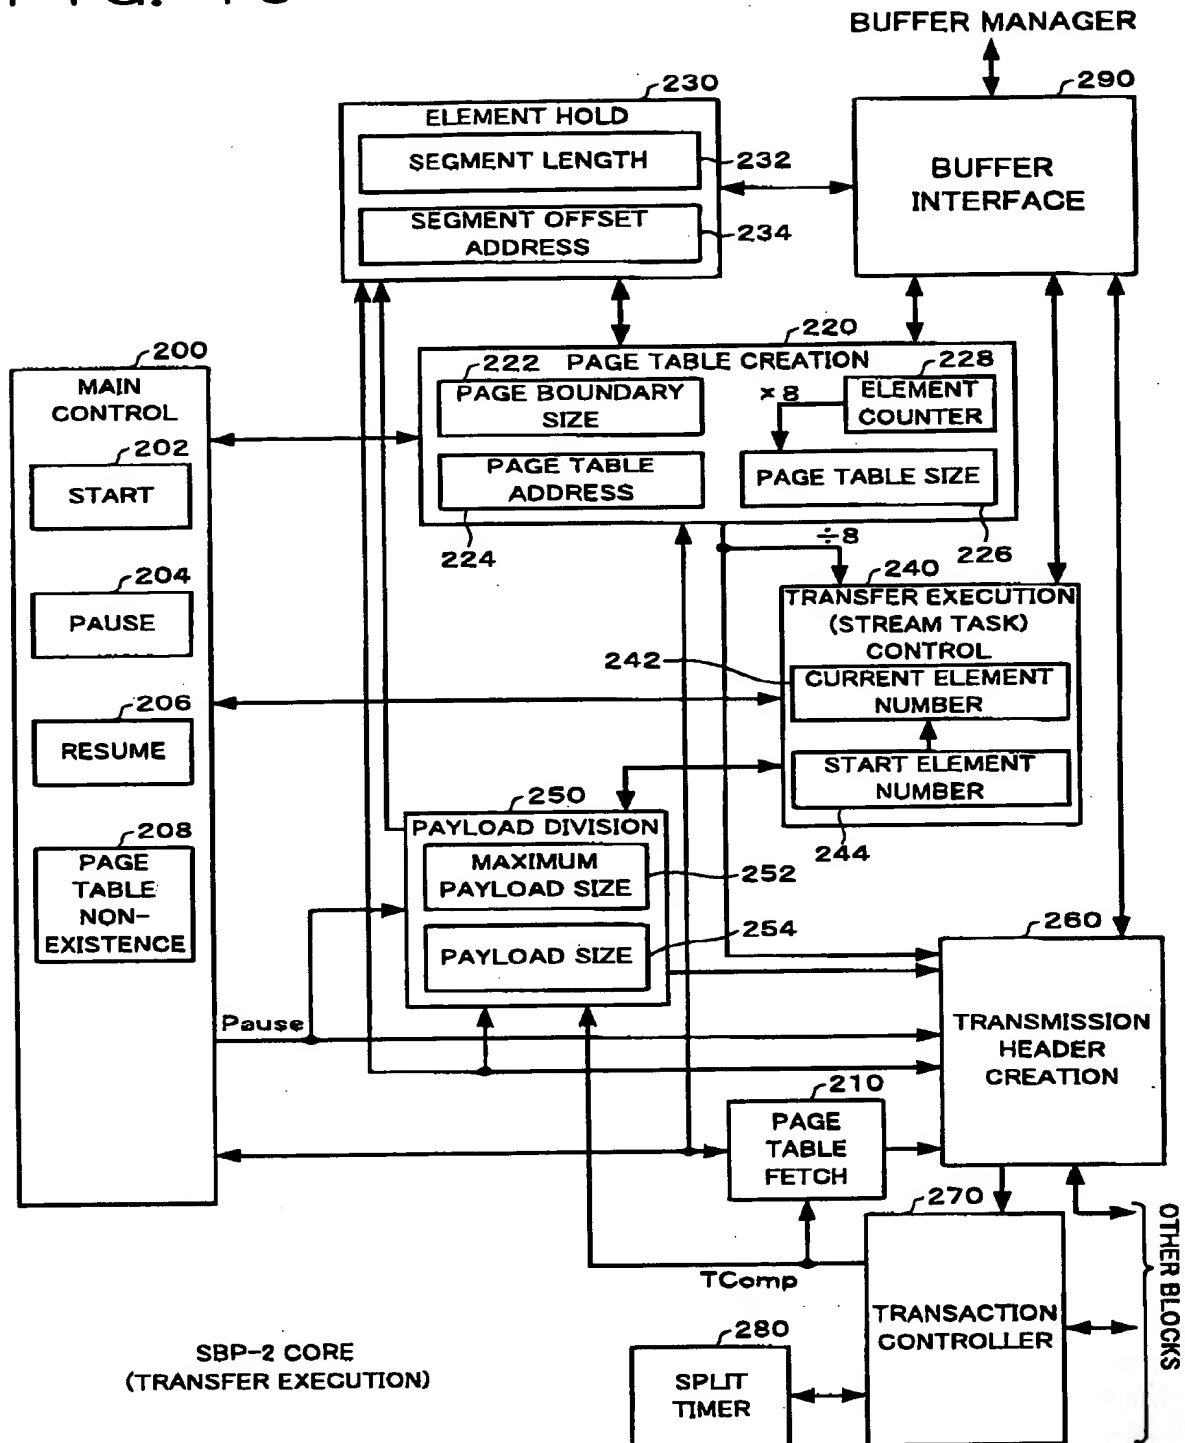 


FIG. 11

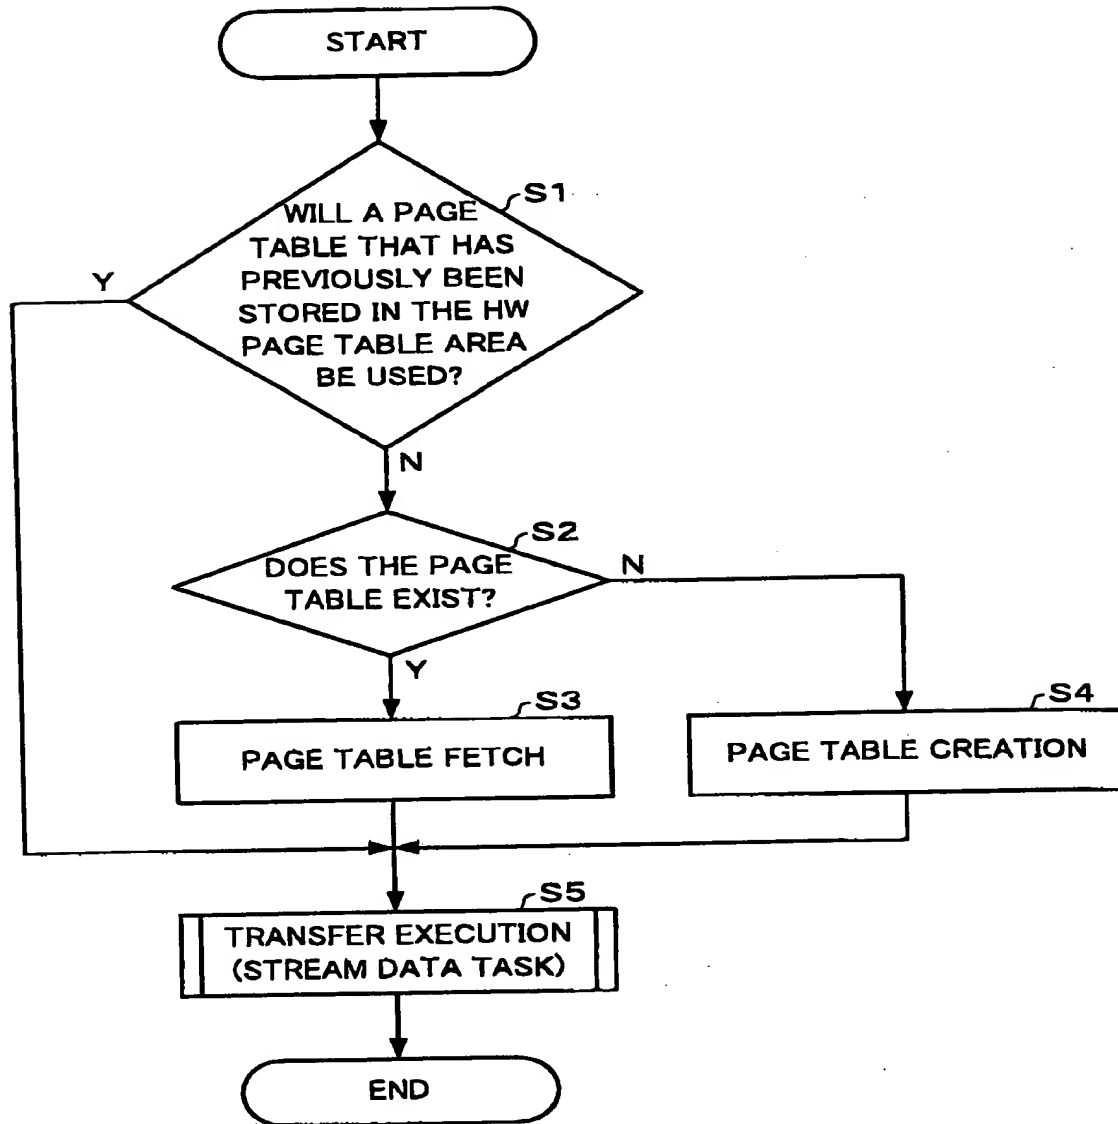 


00688045 101200

 FIG. 12

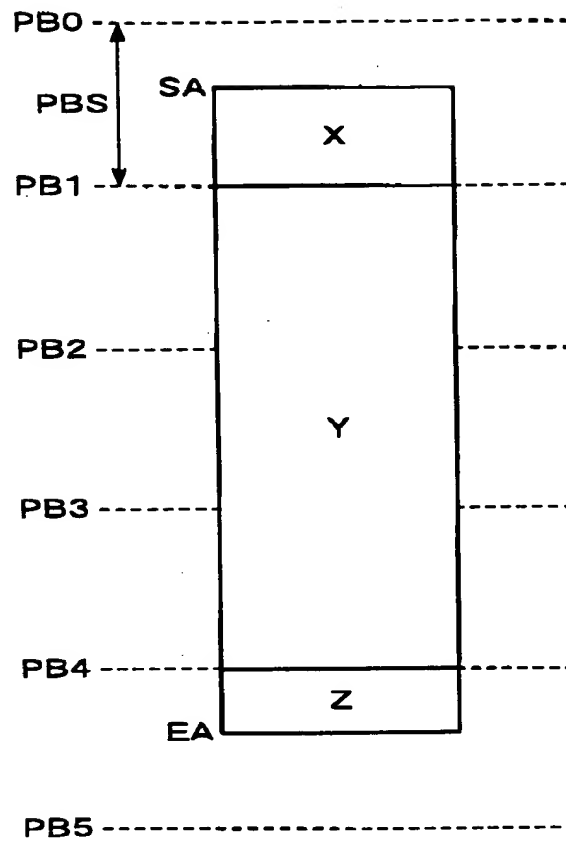


002101" 54083960

 FIG. 13

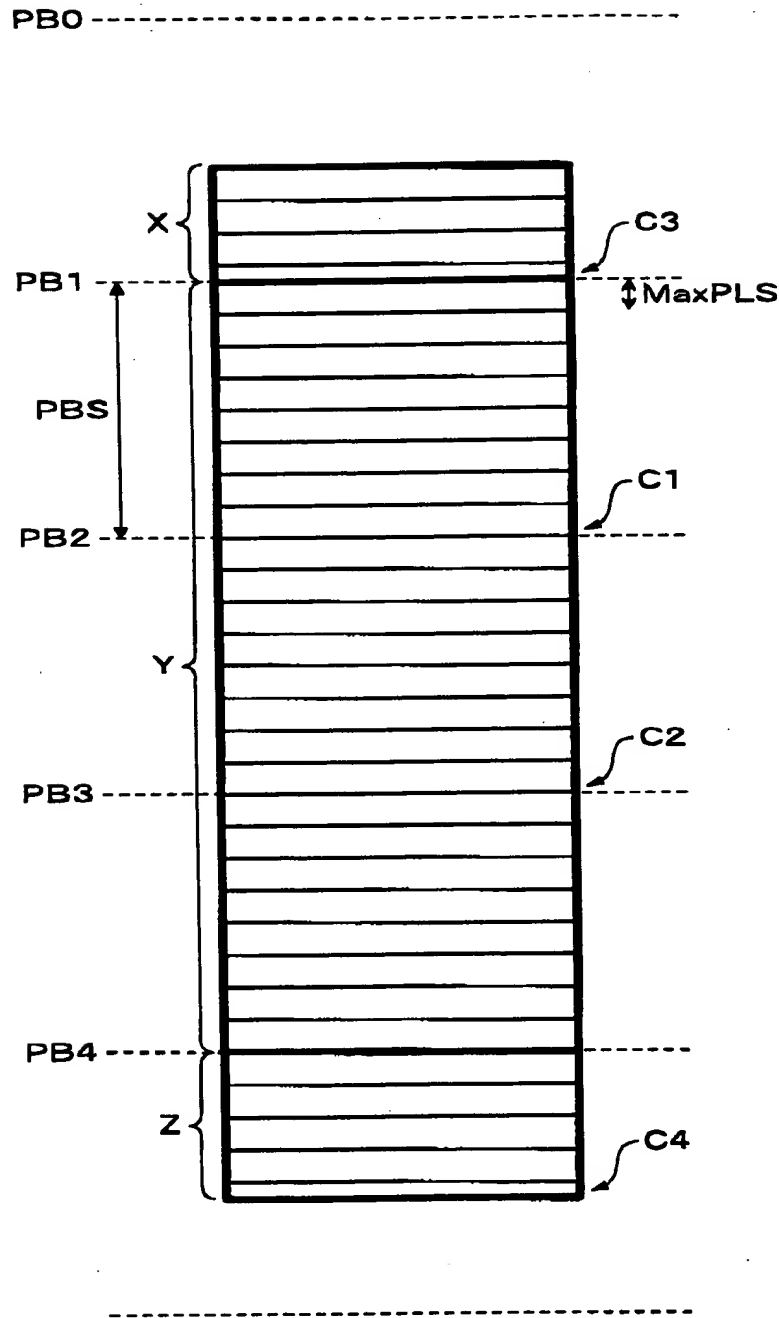

002101 54088960

 FIG. 14

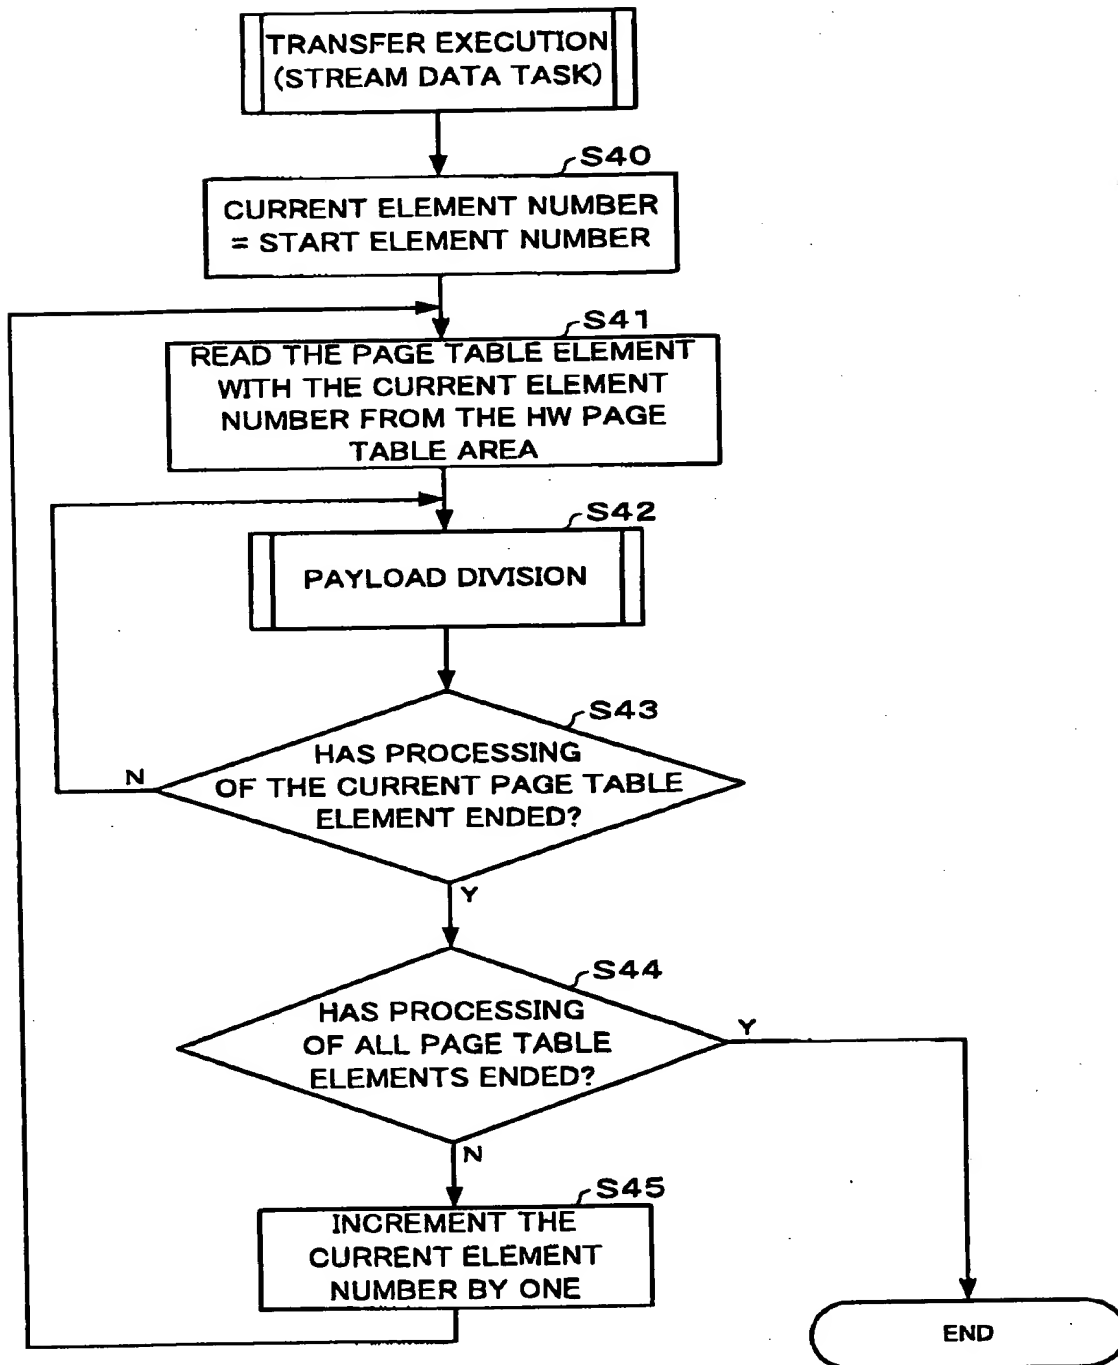

00207" S4088960

09688045 . 101200

FIG. 15


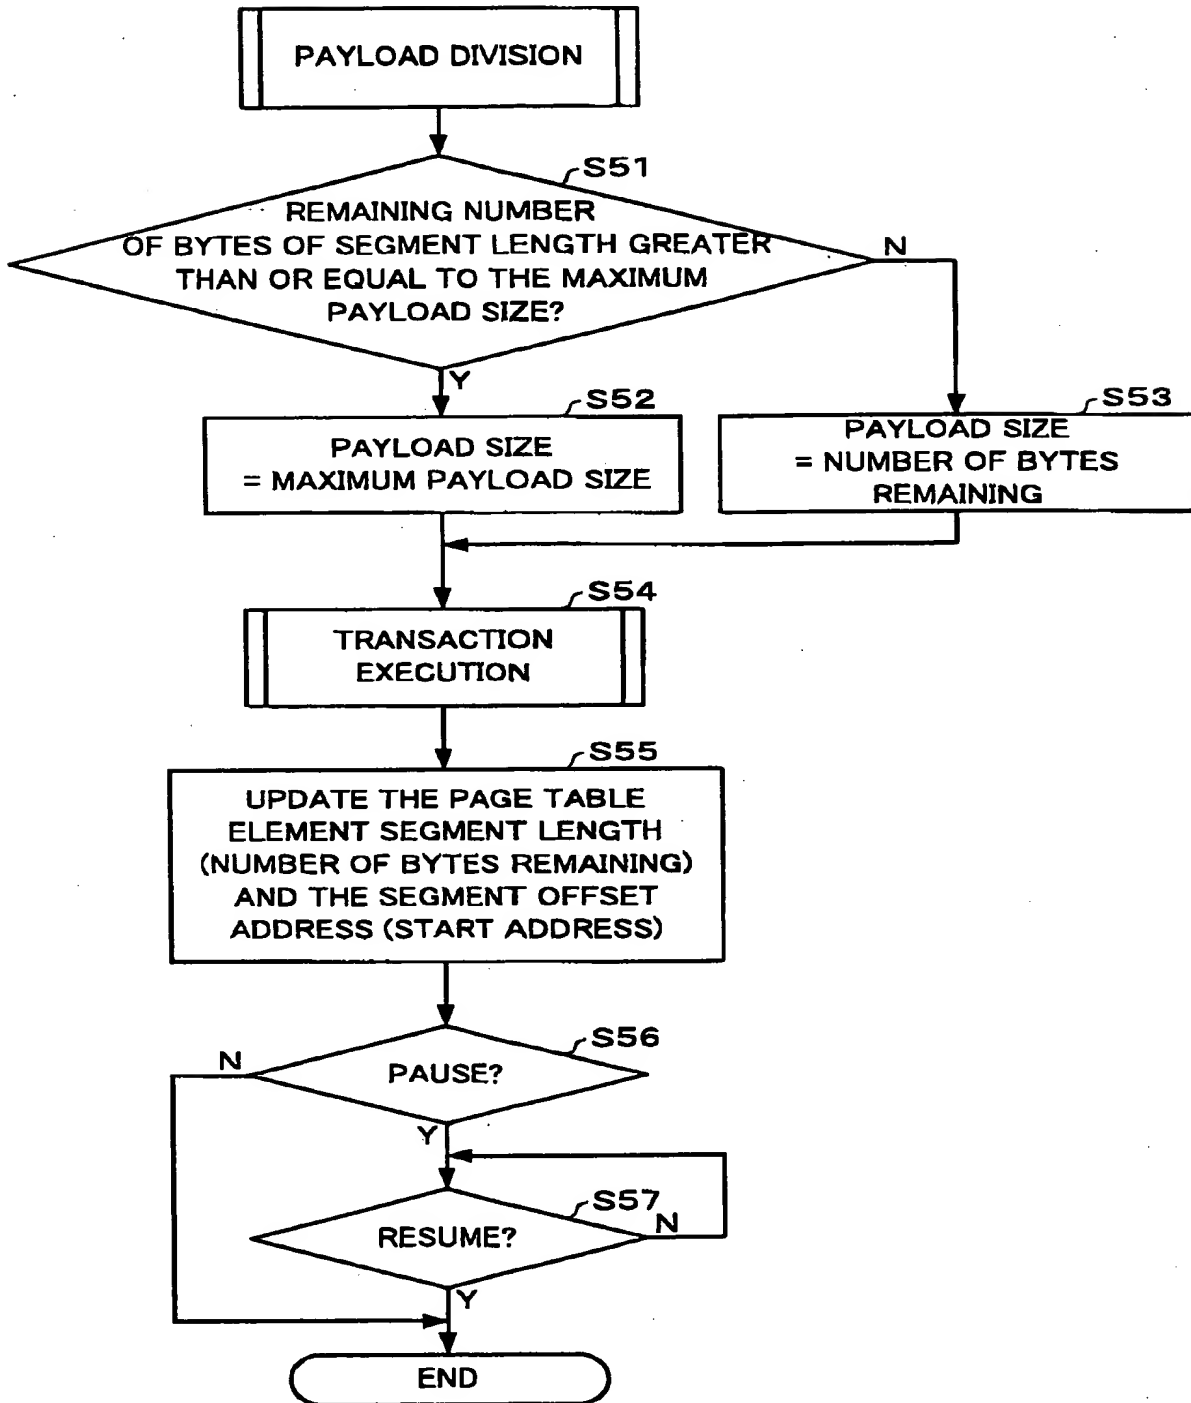 



FIG. 16

 16/30

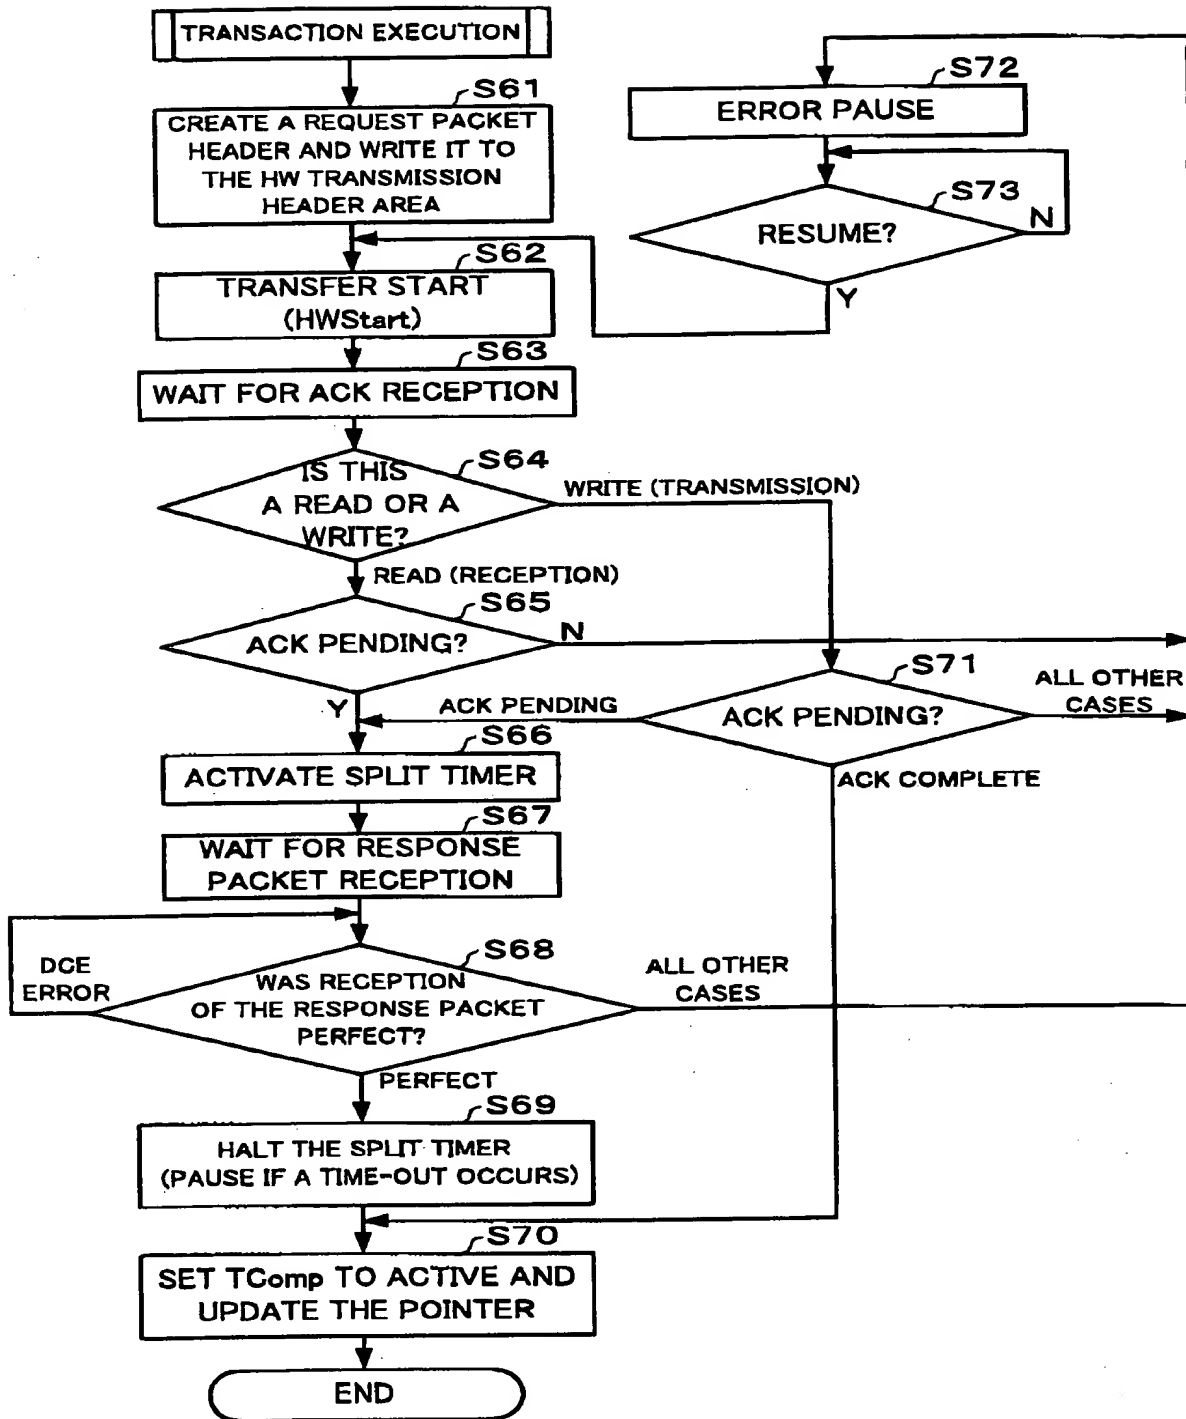

002701" 5488960

 FIG. 17

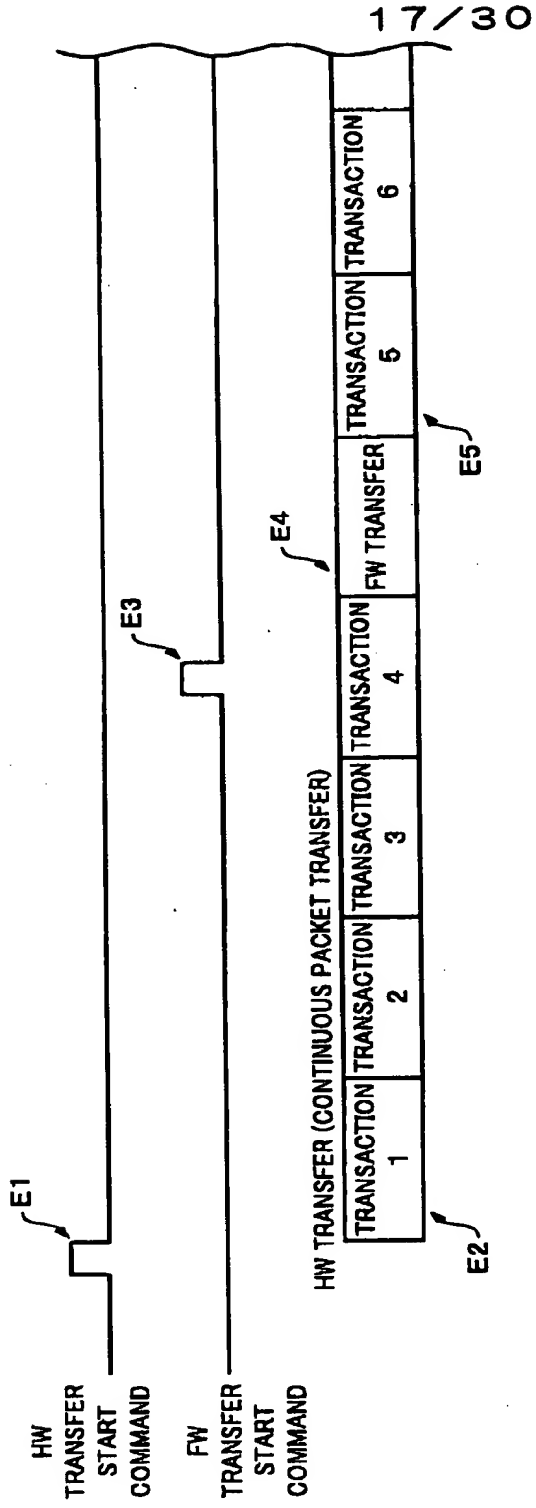

002701"SH088950

FIG. 18

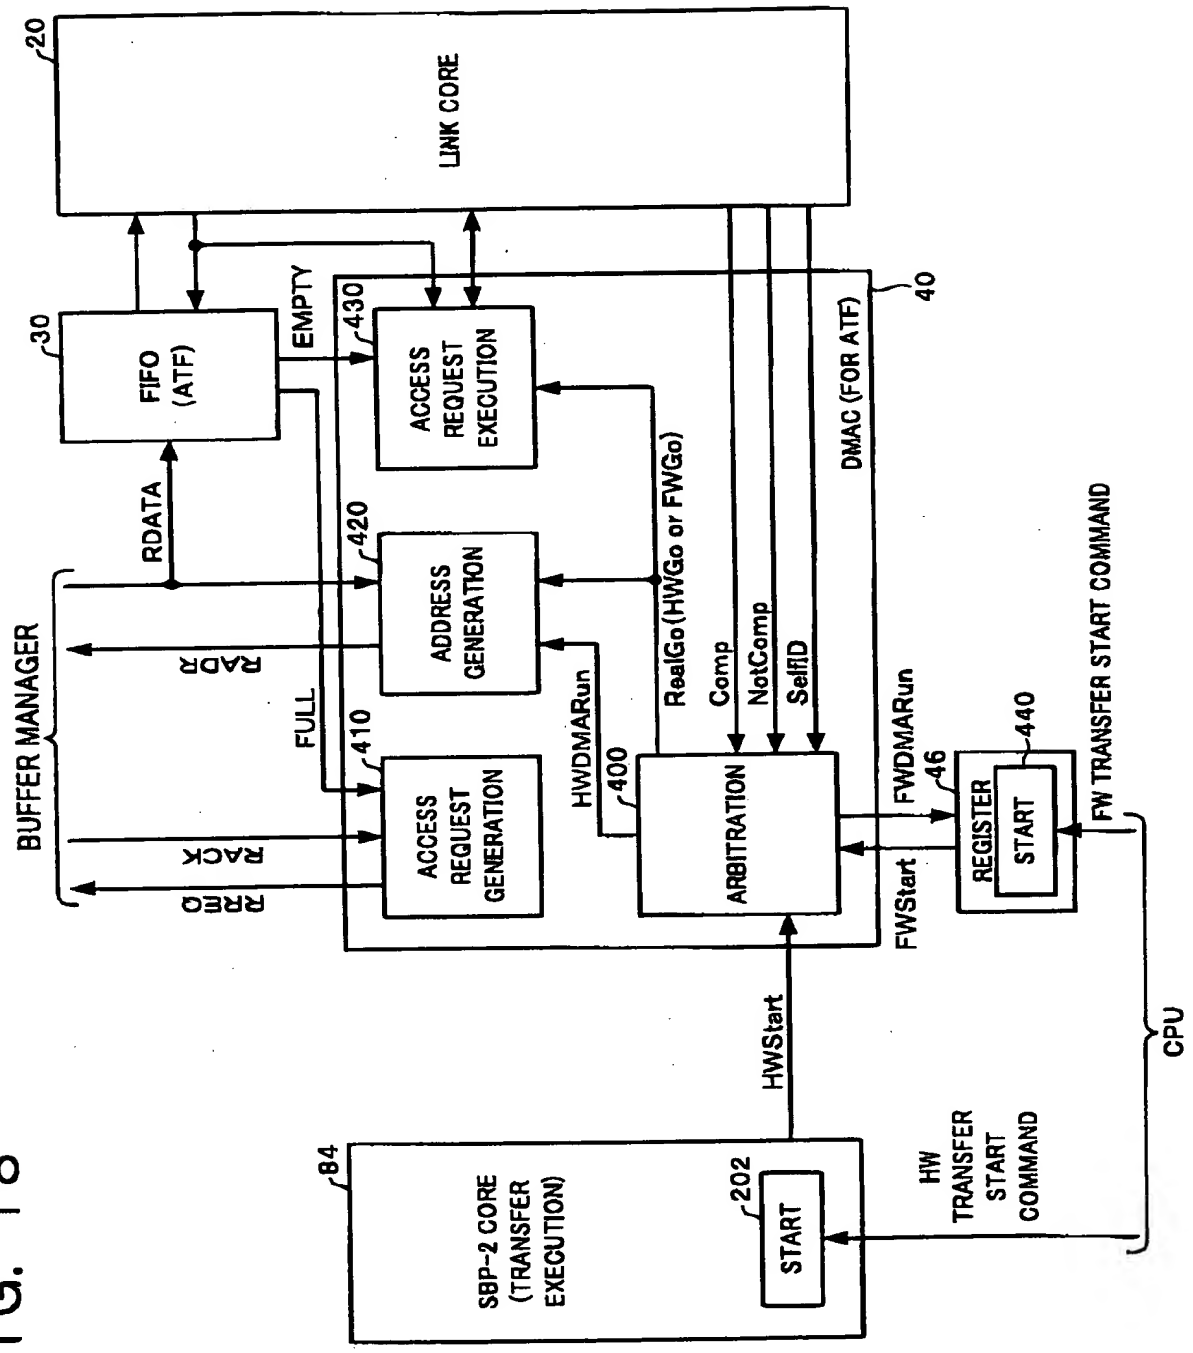 


FIG. 19A

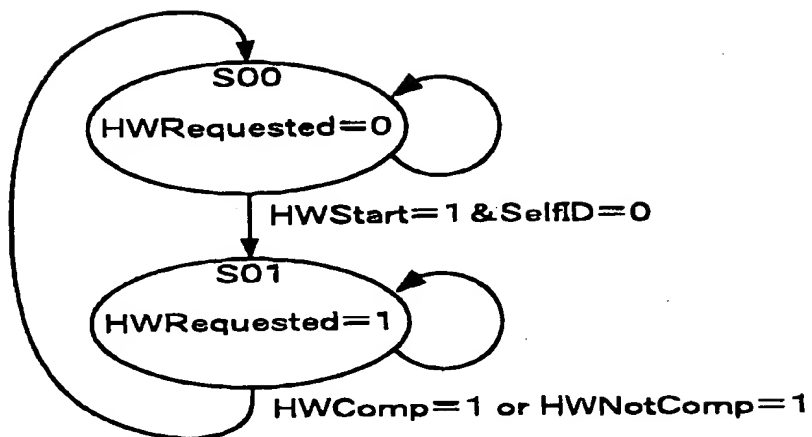 


FIG. 19B

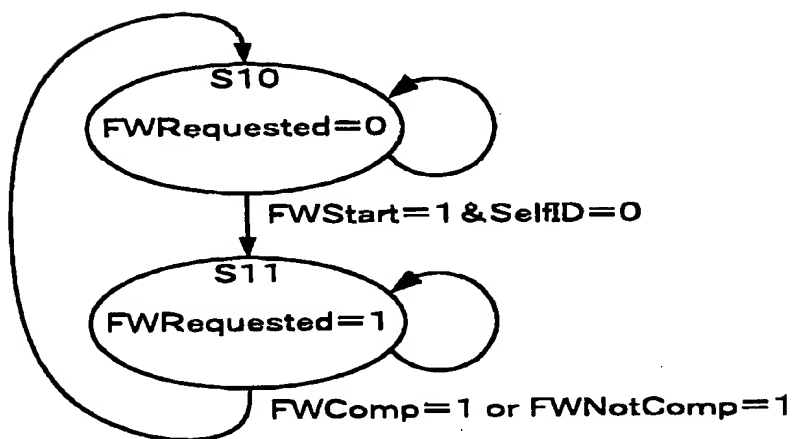 


FIG. 20


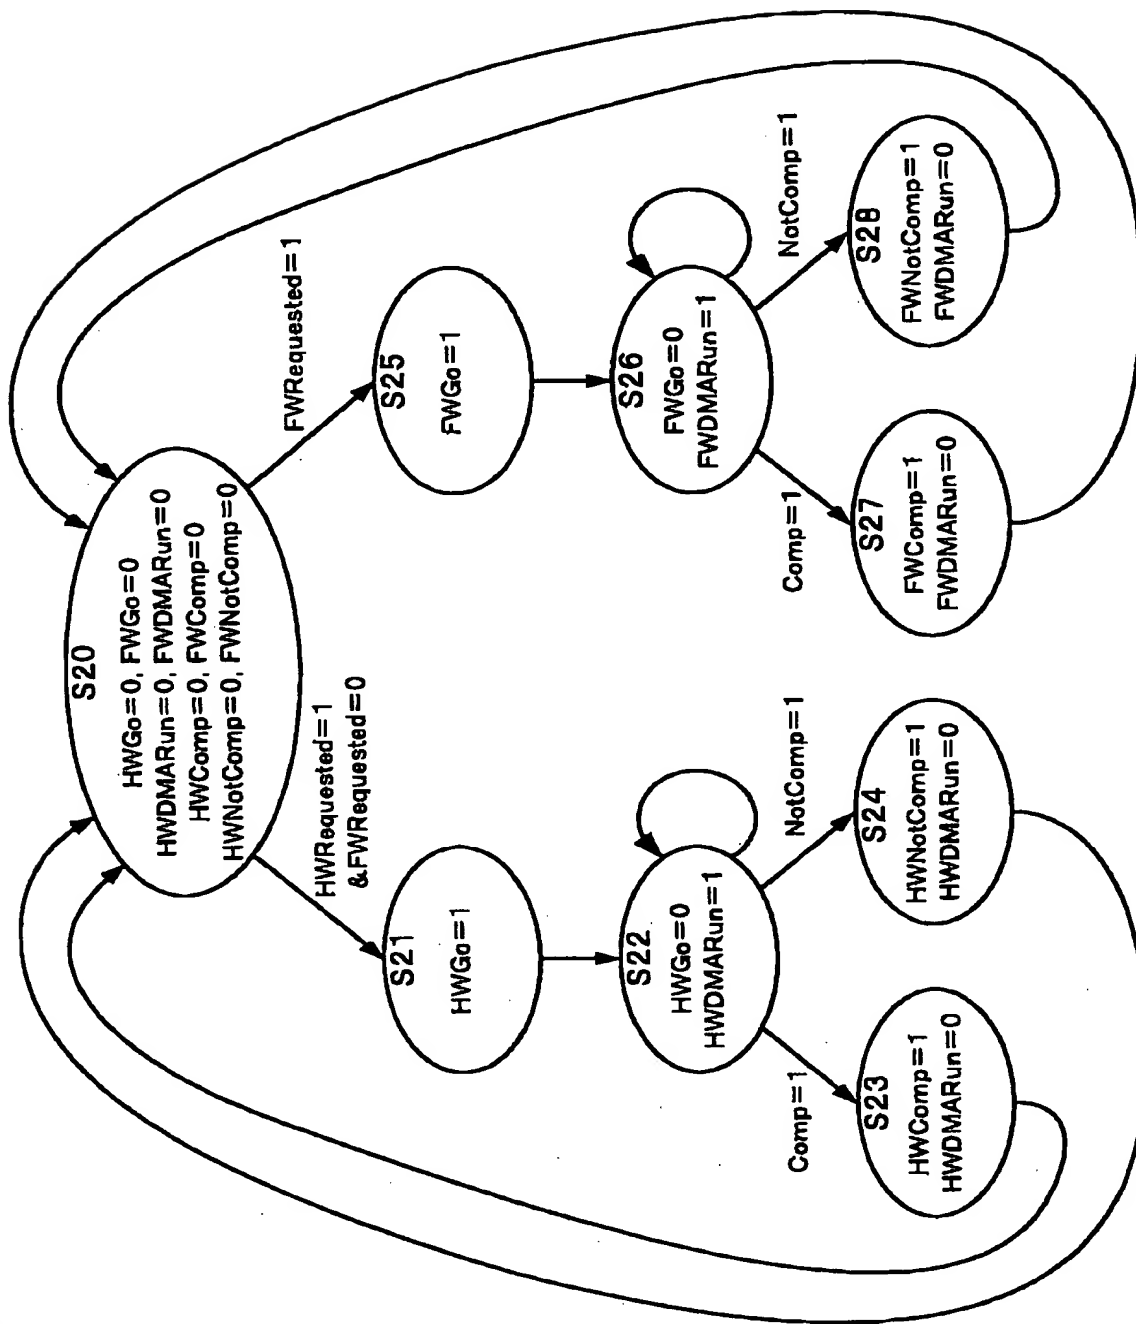 


FIG. 21

 WHEN HWStart GOES ACTIVE FIRST

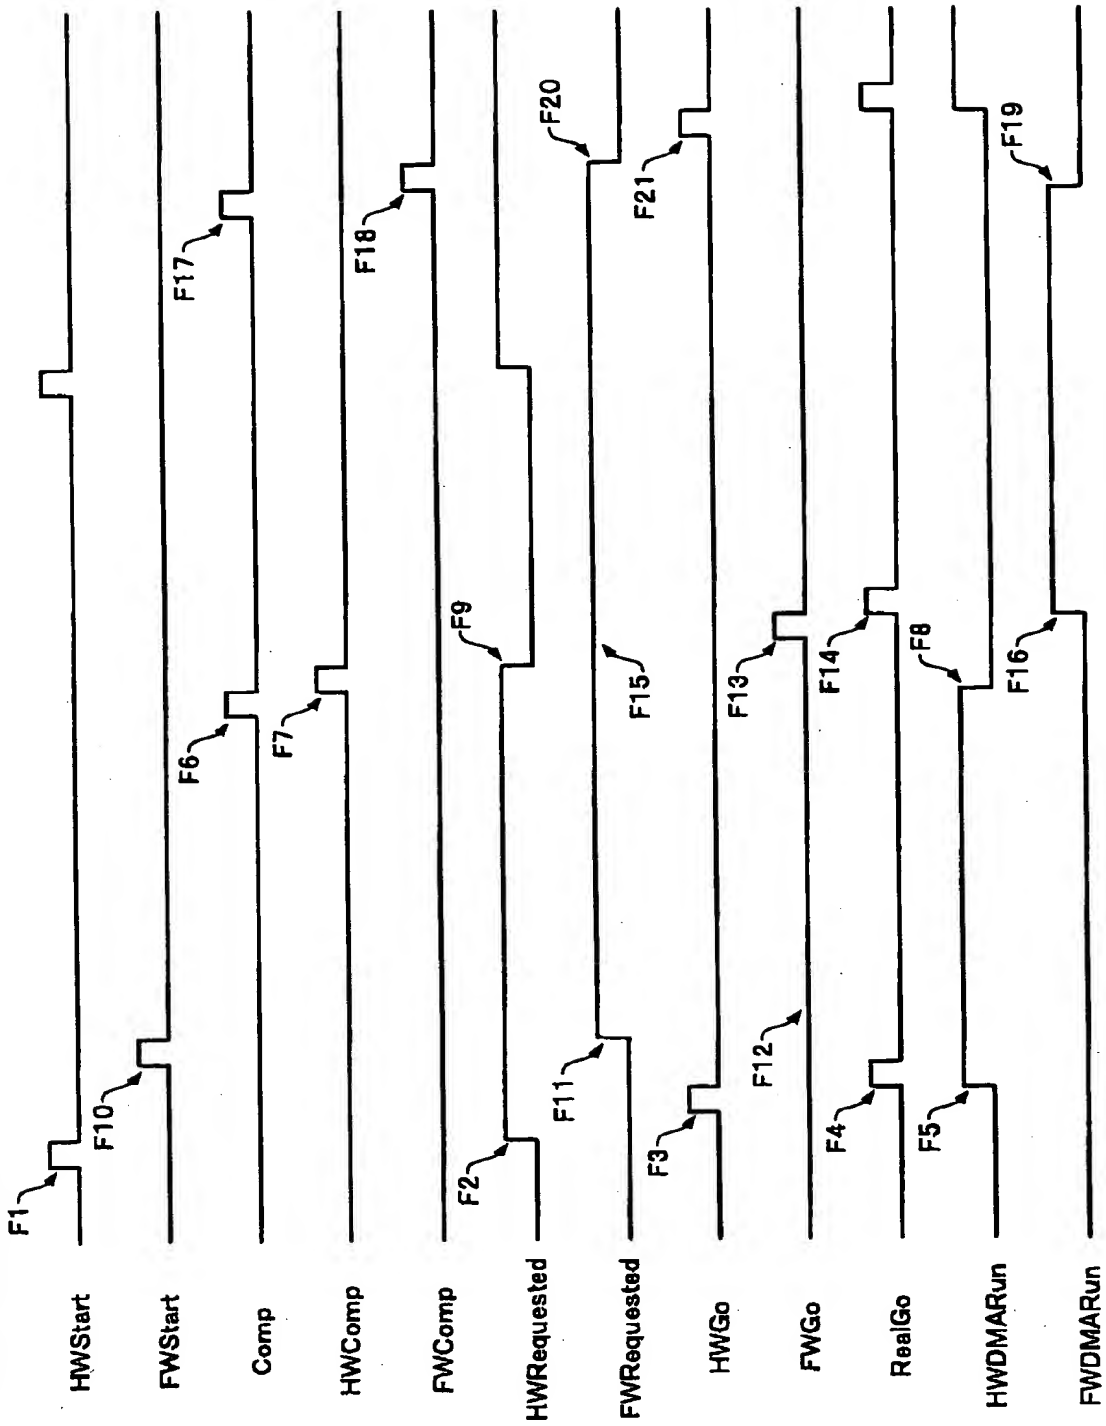

002TDT" SH088960

FIG. 22

WHEN HWStart AND FWStart GO ACTIVE TOGETHER

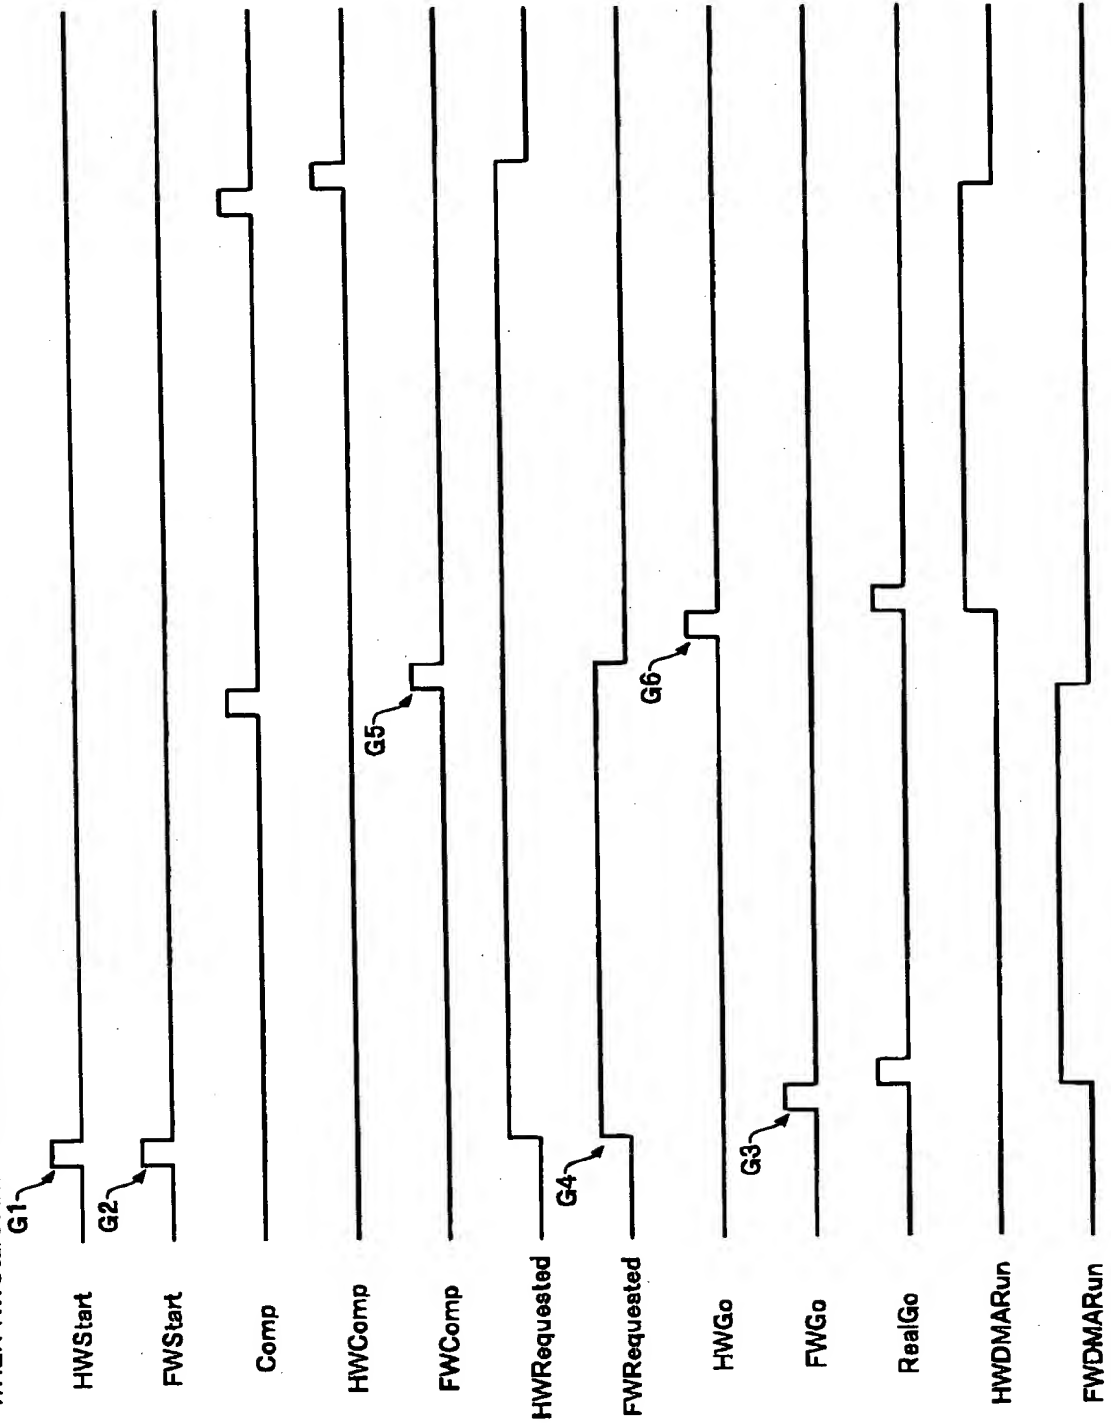 


FIG. 23

WHEN FWStart GOES ACTIVE FIRST

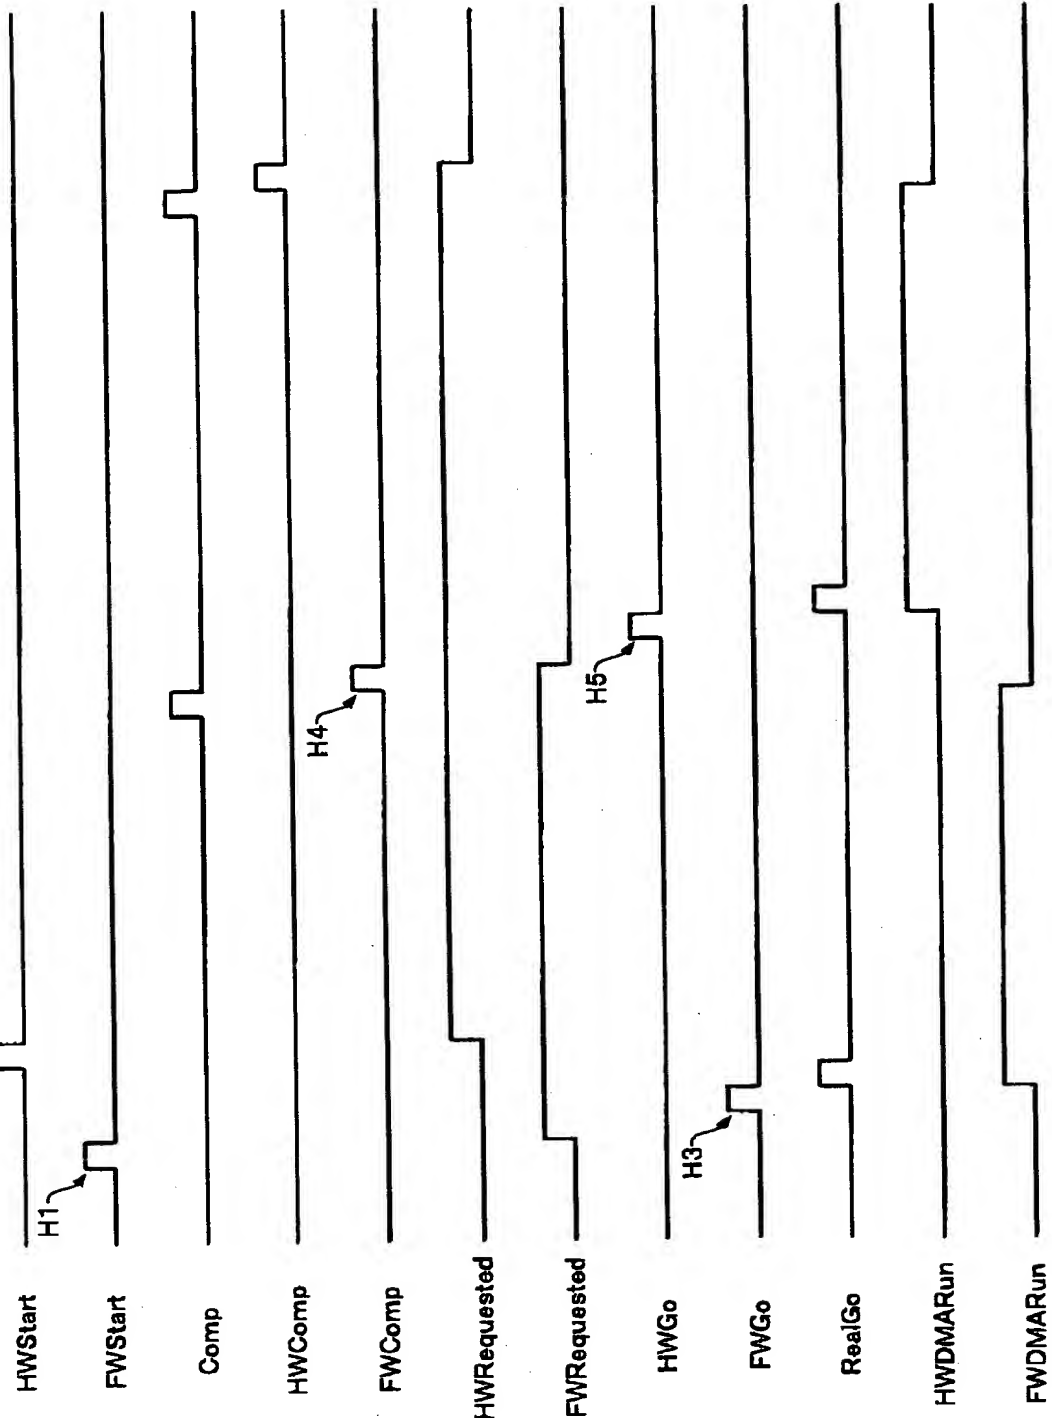 


FIG. 24


 
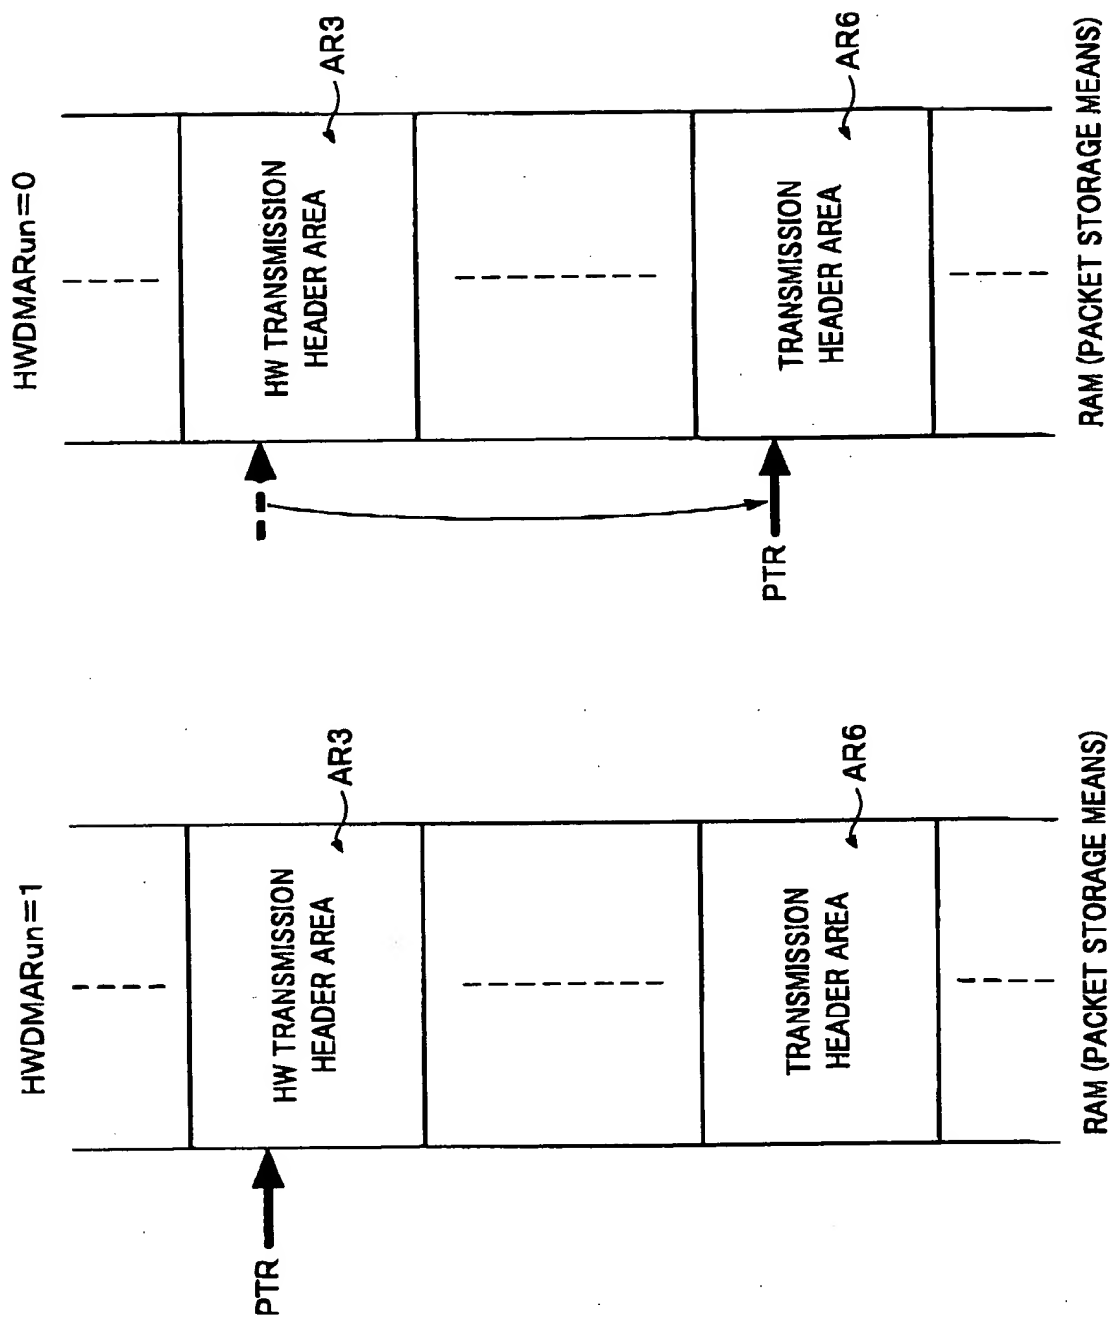 


FIG. 25A

 FIG. 25B

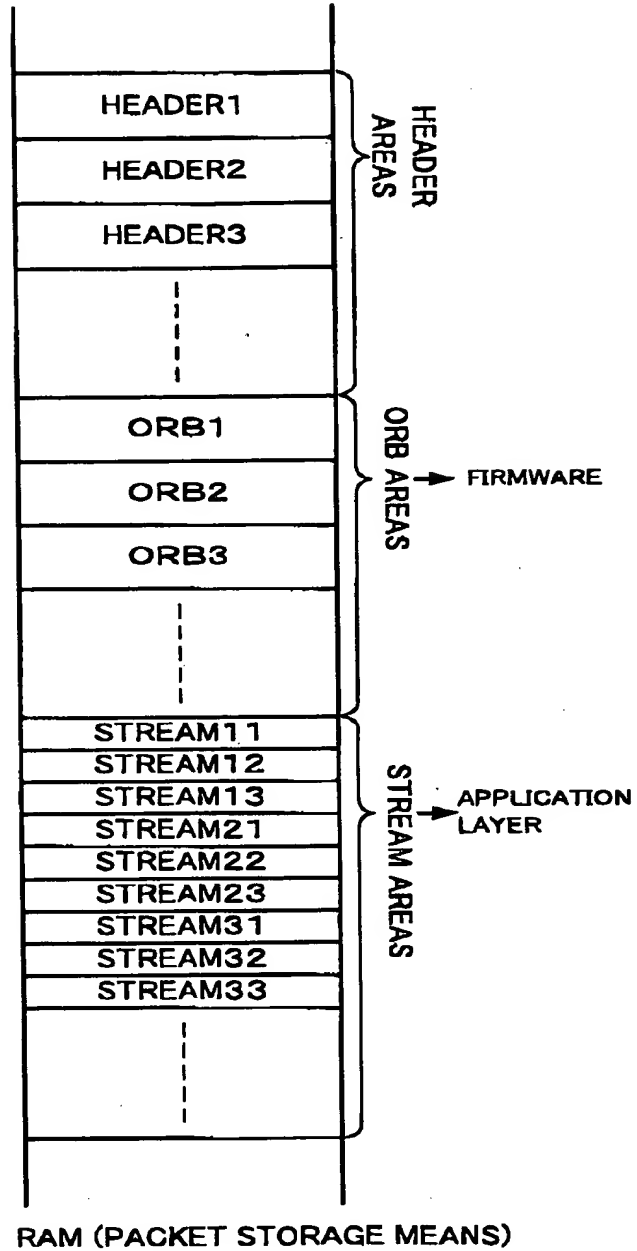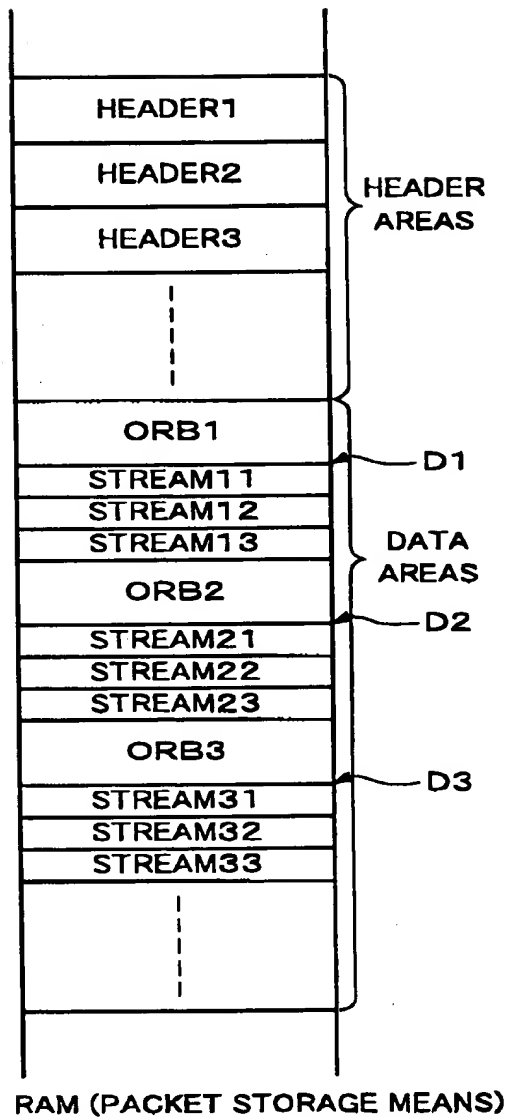

09688045 .101200

FIG. 26

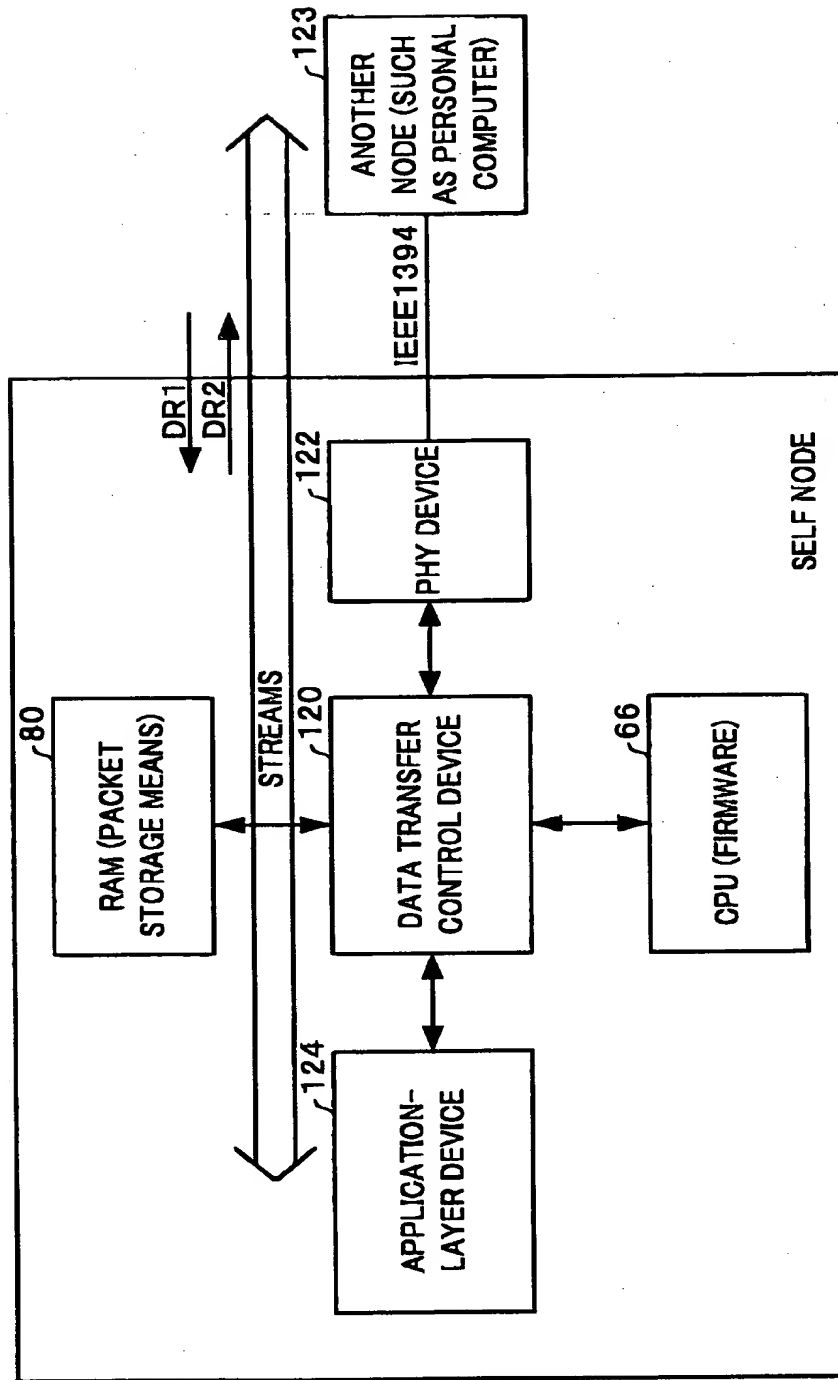 


FIG. 27A

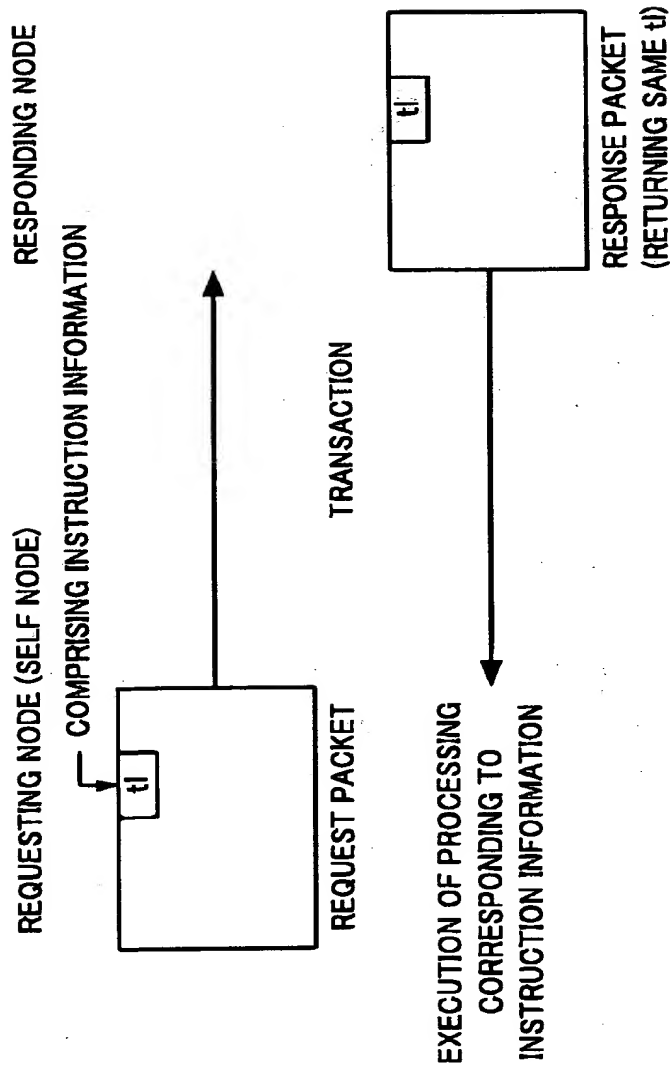 


FIG. 27B

tl (TRANSACTION LABEL)


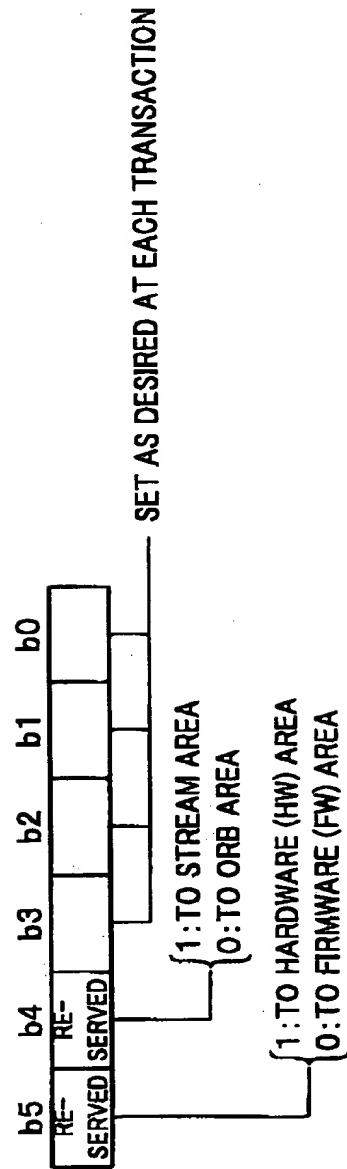 


FIG. 28

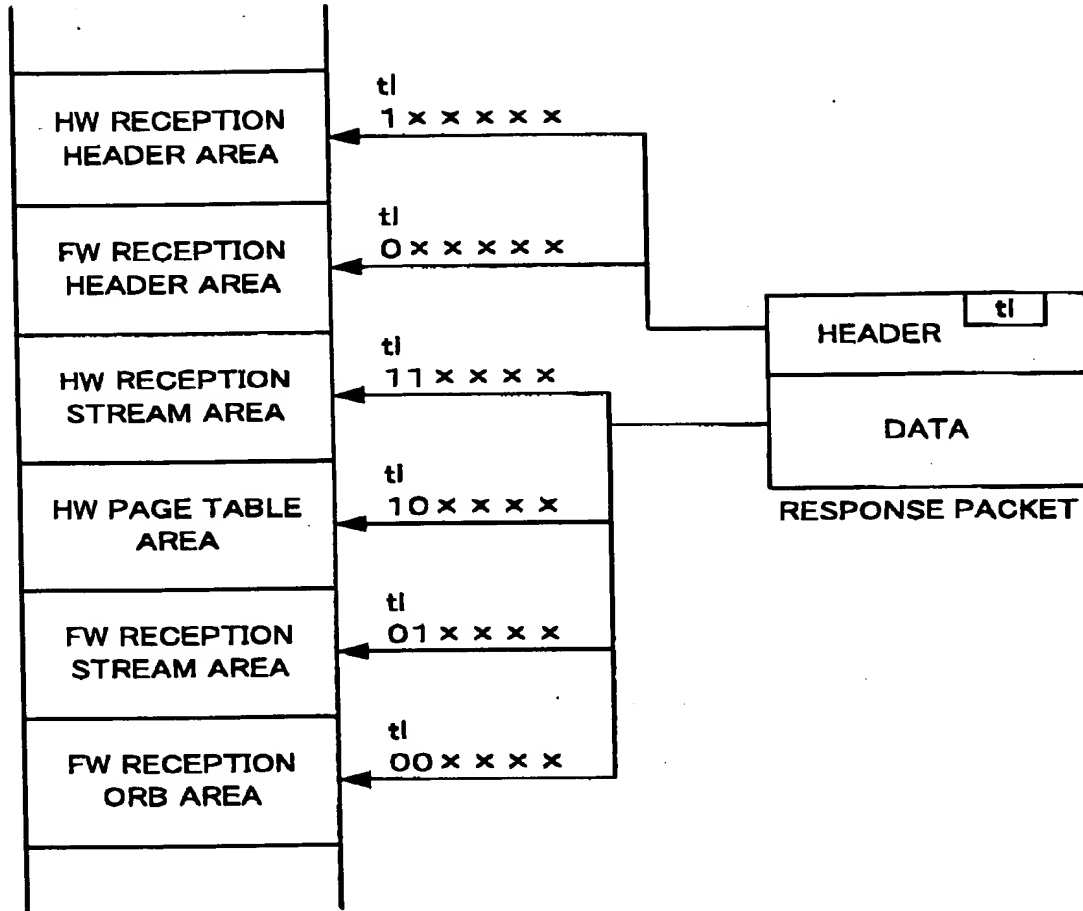 

RAM (PACKET STORAGE MEANS)

FIG. 29A

29/30

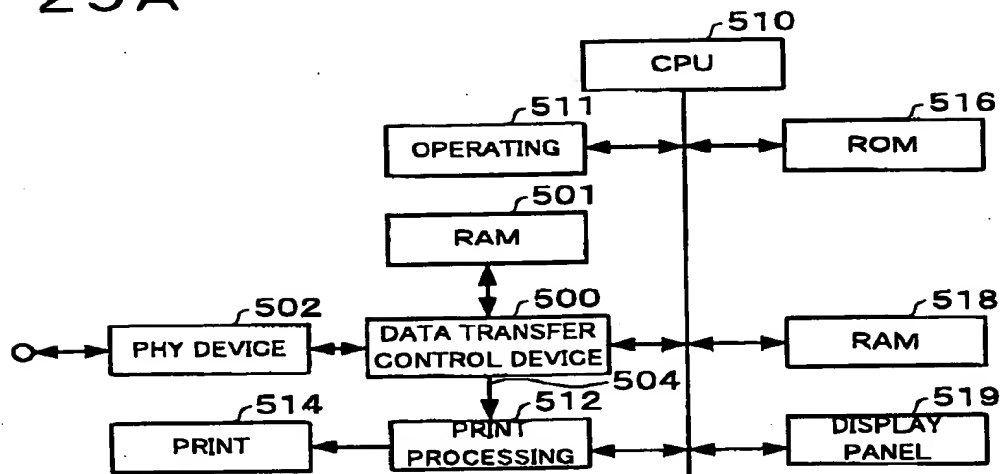 


FIG. 29B


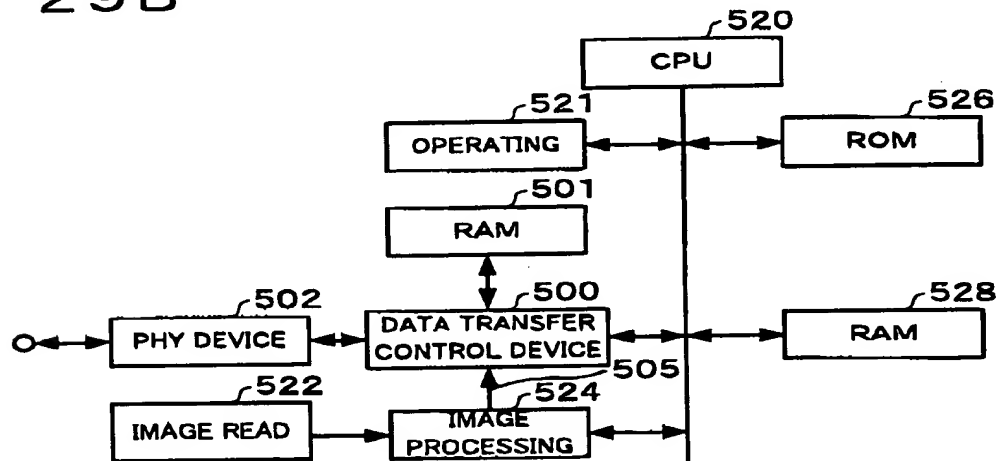 


FIG. 29C

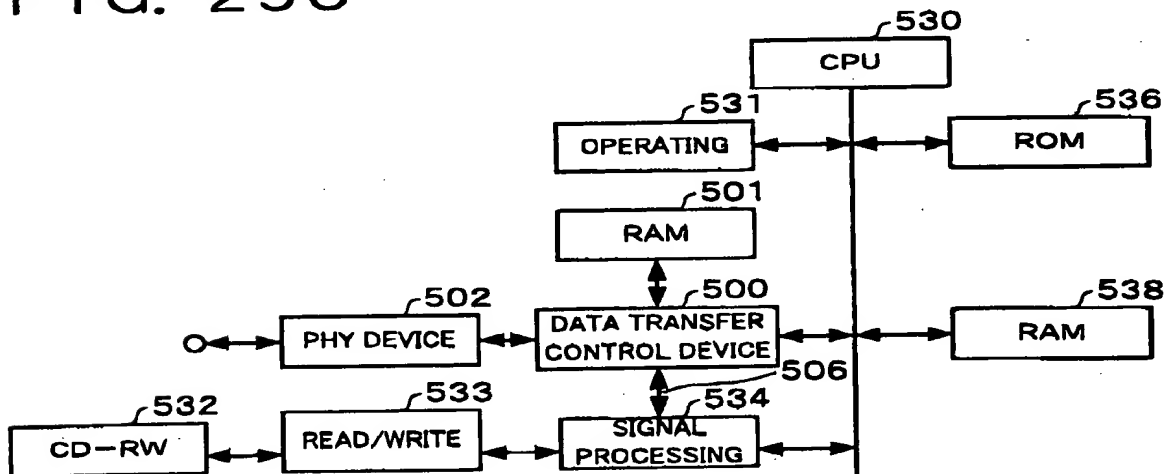 

002207" 54038960

FIG. 30A

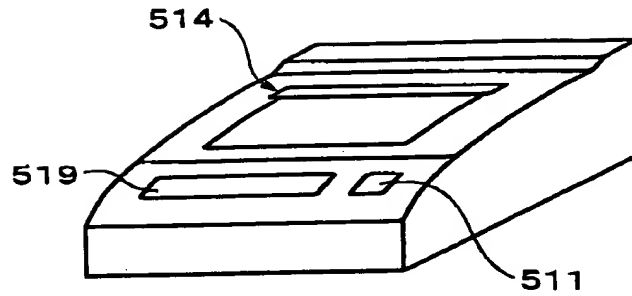 


FIG. 30B


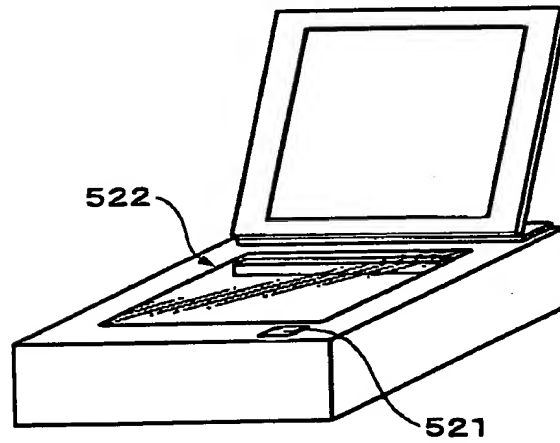 


FIG. 30C

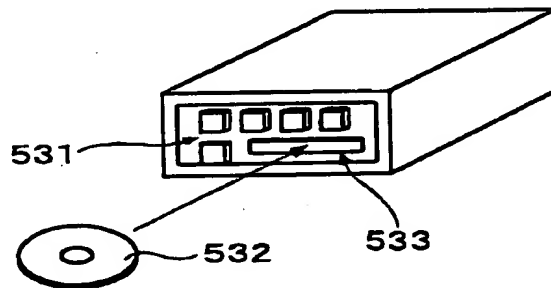 

002101" 54038950